


MODEL

15DIIV 15DI2V

1961

• VIKING

OUTBOARD MOTOR

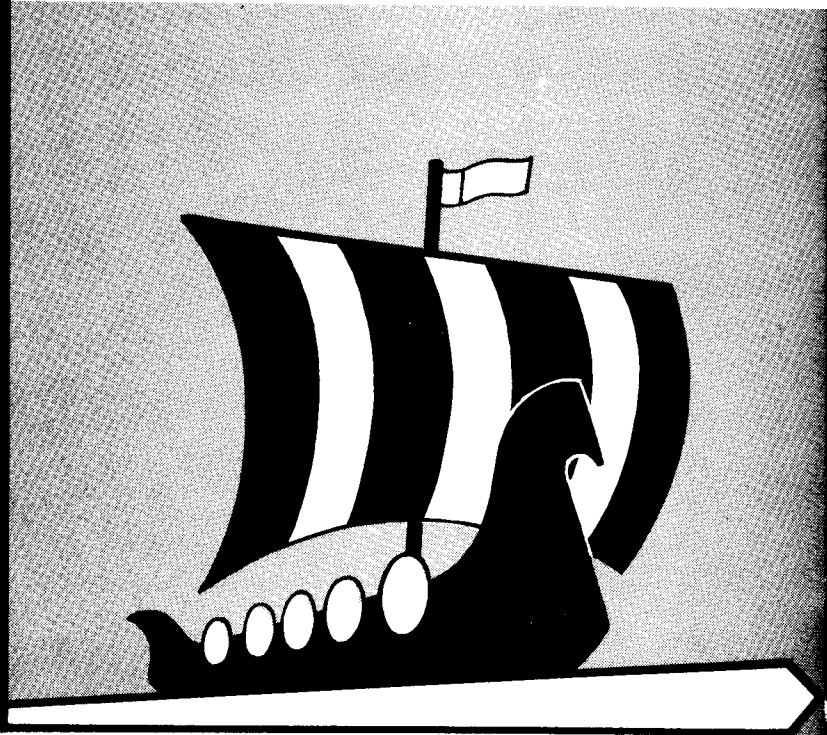


PARTS CATALOGUE

15 H.P. OUTBOARD MOTOR

EATON'S OF CANADA

TRIM

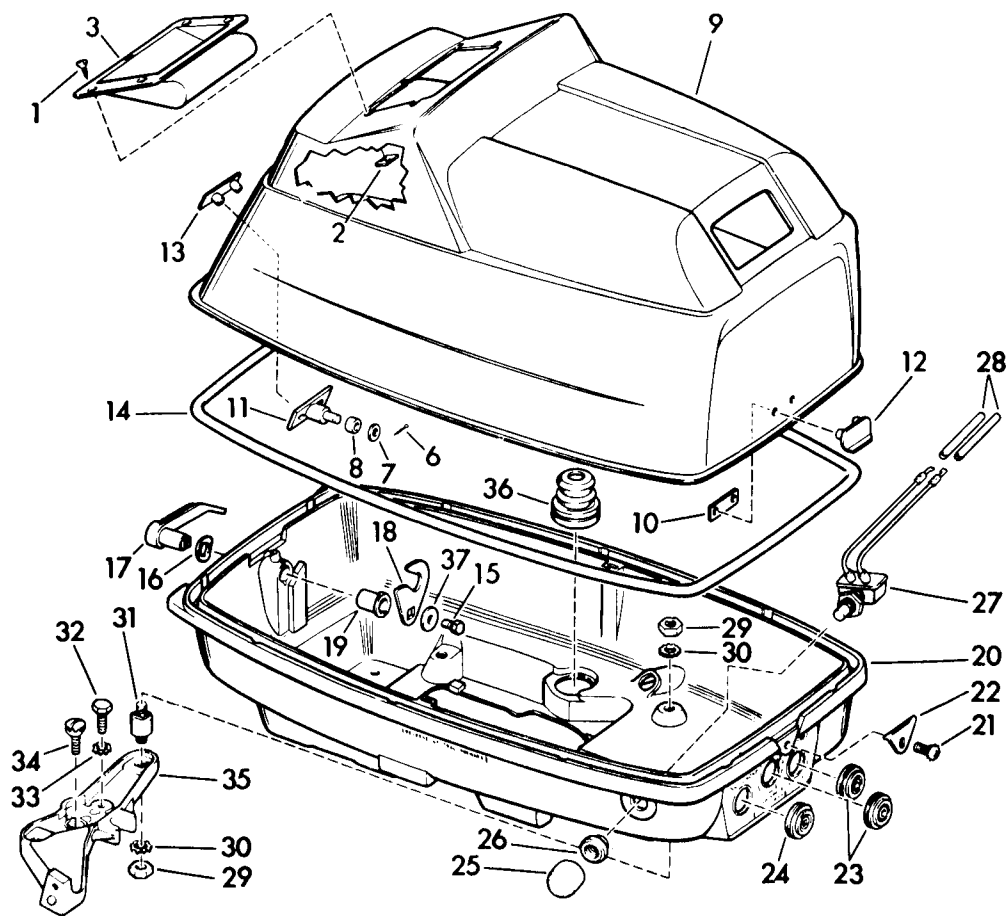


Ref. No.	Part No	Description	Qty.	Ref. No.	Part No.	Description	Qty.
*	486727	SHROUD & TRANSFER ASSEMBLY - complete . . .	1	20	486729	MOTOR COVER - lower . . .	1
1	553774	SCREW	5	21	553765	SCREW	1
2	204472	FASTENER	5	22	553762	HOOK - lower motor cover .	1
3	553749	TILT HANDLE	1	23	204456	GROMMET - high and low speed	2
6	306463	COTTER PIN	1	24	204457	GROMMET - choke	1
7	307596	WASHER	1	25	203660	COVER - shorting switch . .	1
8	204443	ROLLER - latch	1	26	203658	NUT	1
9	486728	SHROUD & TRANSFER ASSEMBLY - upper . . .	1	27	377289	SHORTING SWITCH	1
10	553763	SUPPORT - anchor and rivet assembly . .	1	28	303806	TUBING - insulating	2
11	592939	ANCHOR BLOCK & PIN ASSEMBLY	1	29	302103	NUT	8
12	592934	ANCHOR & RIVET ASSEMBLY	1	30	306799	LOCKWASHER	8
13	592938	RIVET & PLATE ASSEMBLY	1	31	377582	RUBBER MOUNT ASSEMBLY - lower motor cover support	4
14	553898	SEAL - motor cover	1	32	306487	SCREW	1
15	305284	SCREW	1	33	306488	WASHER - front mount bracket	1
16	553766	BOW WASHER	1	34	307468	SCREW	1
17	553767	LEVER - latch to lower motor cover	1	35	307467	BRACKET - mounting - lower front - shroud	1
18	553768	LATCH - lower motor cover	1	36	306119	GROMMET - control shaft to lower motor cover	1
19	553769	BUSHING	1	37	304051	WASHER	1
				*	486687	SET OF DECALS	1

*Not shown.

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

MAGNETO

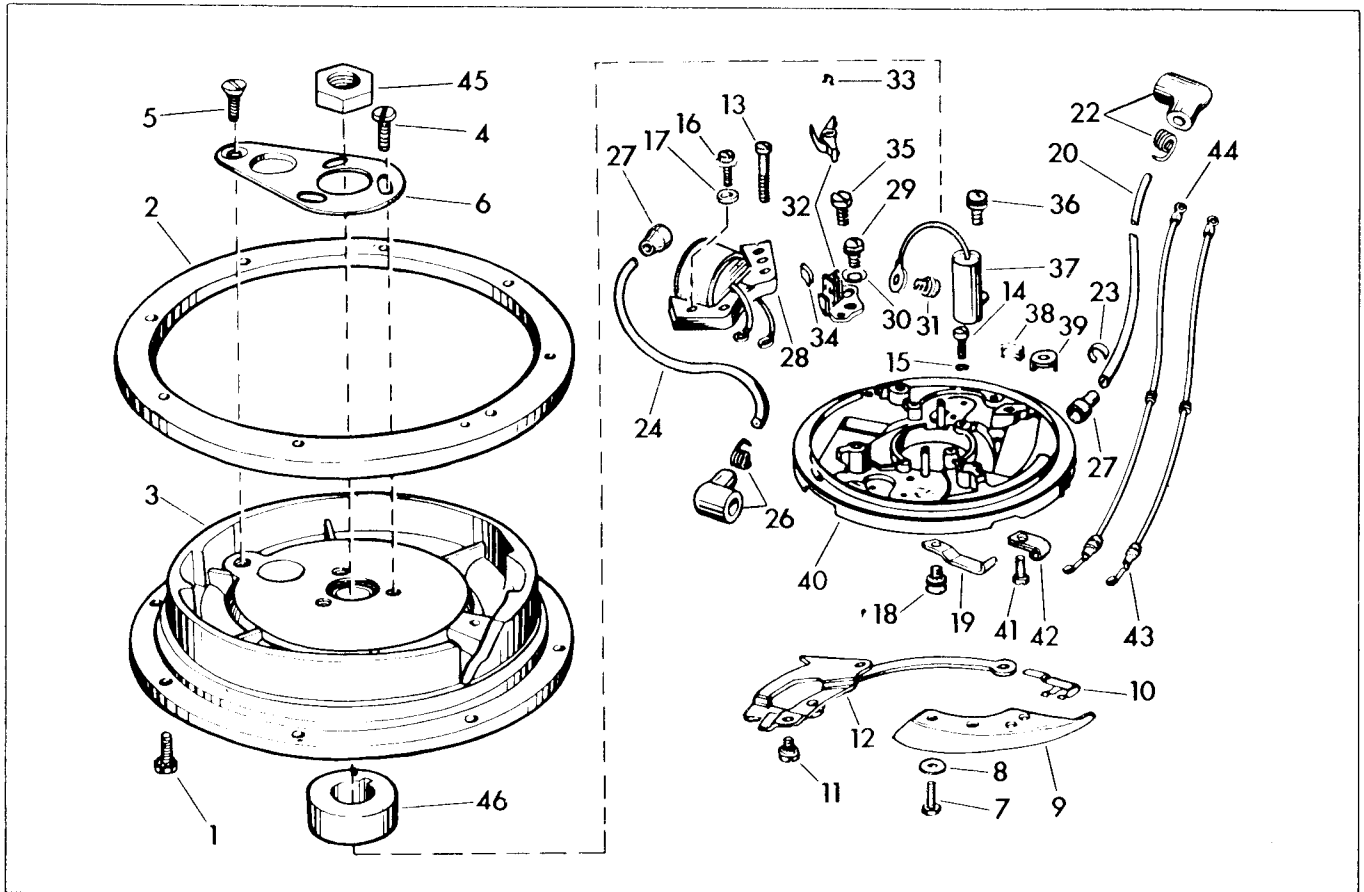


Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
*	580227	FLYWHEEL & RING ASSEMBLY	1	24	510235	HIGH TENSION LEAD - lower	1
1	303698	SCREW	8	26	580339	COVER & TERMINAL ASSY	1
2	304737	FLYWHEEL RING	1	27	510289	GROMMET	2
3	580228	FLYWHEEL & COVER	1	28	580197	COIL & LAMINATION ASSEMBLY	2
4	203751	SCREW	3	29	510278	SCREW	2
5	510293	SCREW	1	30	510208	BOW WASHER	2
6	510292	INSPECTION HOLE COVER	1	31	510194	SCREW	2
7	304441	SCREW	2	32	580148	BREAKER ASSEMBLY	2
8	300154	WASHER	2	33	307594	SPRING CLIP	2
9	203277	CAM - throttle	1	34	510204	CLIP - breaker spring	2
10	305988	CLIP - spring - armature plate link	1	35	510185	SCREW - breaker eccentric	2
11	510193	SCREW	2	36	510193	SCREW	2
12	376313	LINK & STOP ASSEMBLY	1	37	580321	CONDENSER	2
*	580270	ARMATURE PLATE ASSEMBLY	1	38	510189	OILER WICK	1
13	510286	SCREW	2	39	510188	OILER CLIP	1
14	510192	SCREW	2	40	580283	ARMATURE PLATE, SLEEVE & POST ASSEMBLY	1
15	306311	LOCKWASHER	2	41	510278	SCREW	1
16	510397	SCREW	4	42	510371	CLAMP	1
17	306547	WASHER	2	43	580268	LEAD ASSEMBLY - shorting wire - long	1
18	510193	SCREW	1	44	580269	LEAD ASSEMBLY - shorting wire - short	1
19	510409	CLAMP	1	45	301988	NUT - flywheel	1
20	510234	HIGH TENSION LEAD - upper	1	46	510168	CAM - magneto	1
22	580339	COVER & TERMINAL ASSY	1				
23	510396	IDENTIFICATION BAND - upper H.T. lead	1				

*Not shown.

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

CARBURETOR

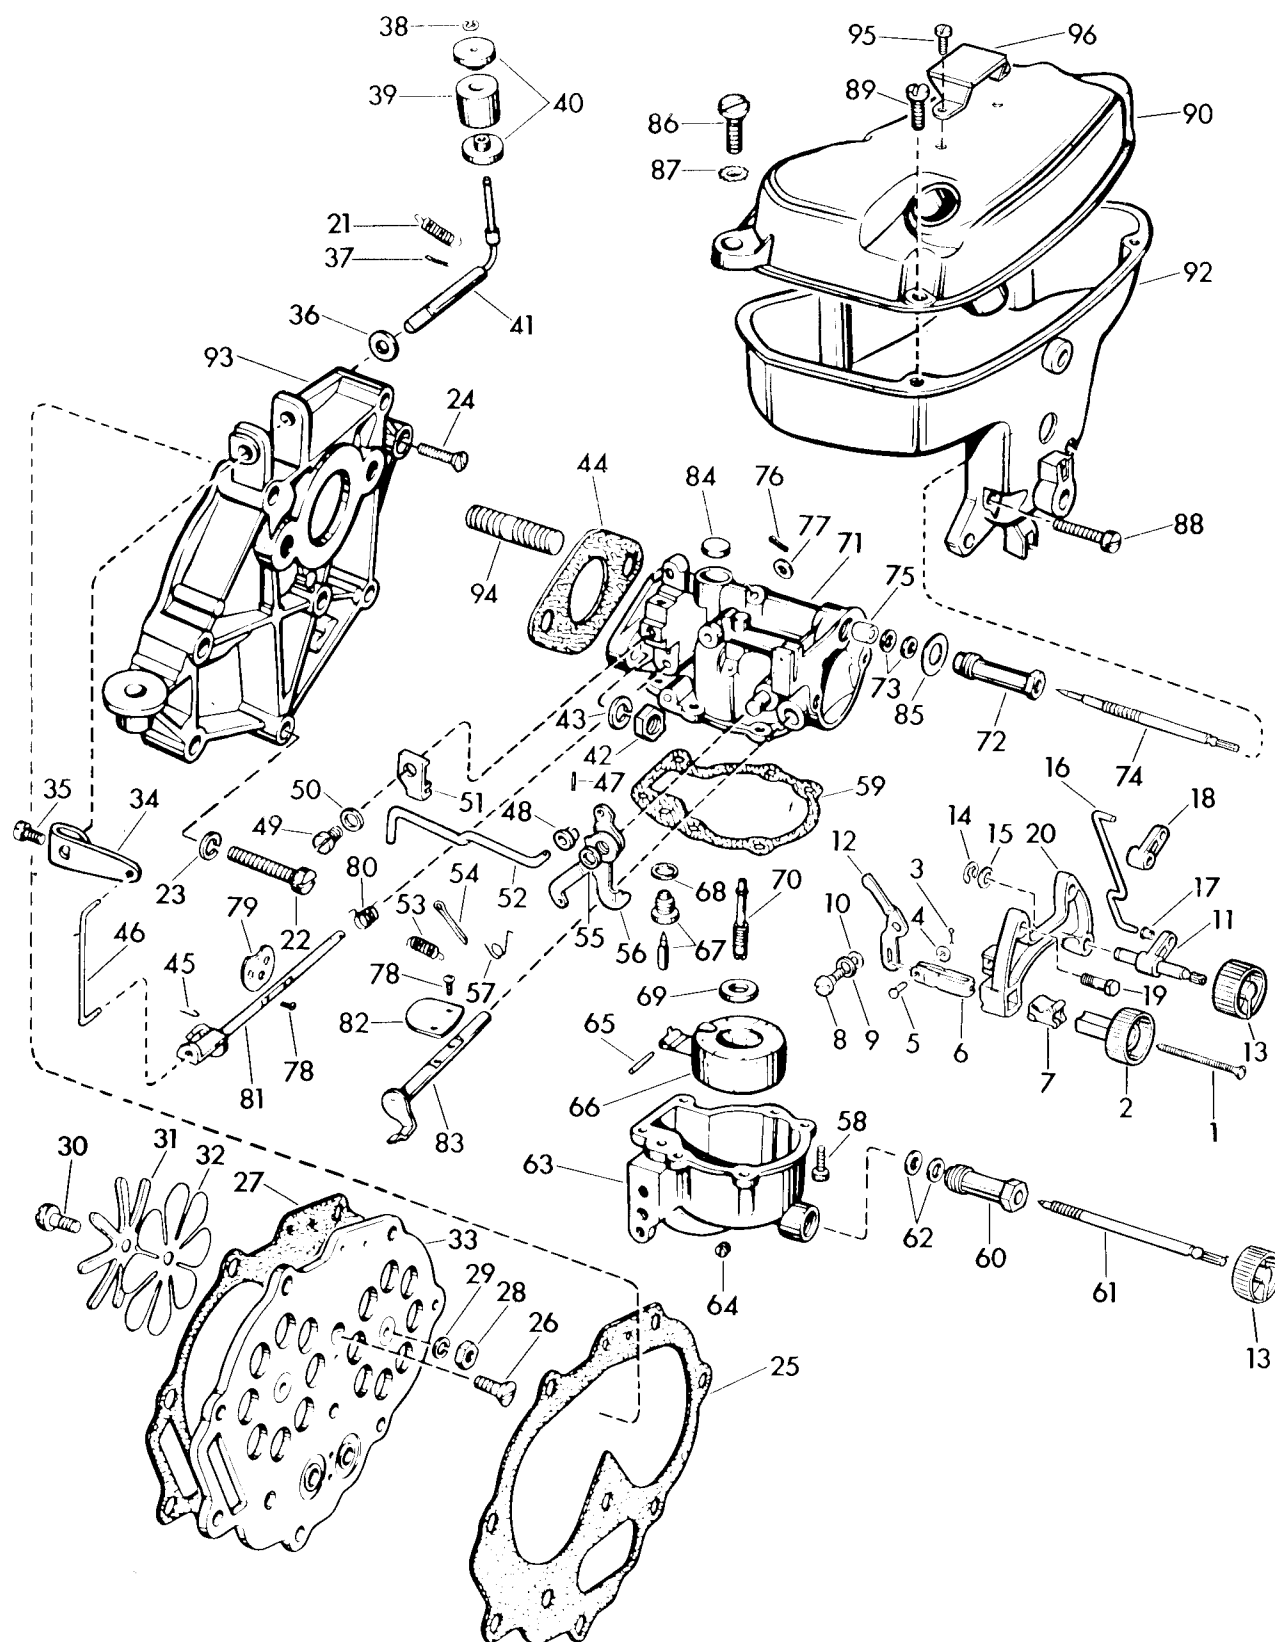



CARBURETOR

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	554039	SCREW	1	51	204488	SUPPORT - throttle con-	
2	553756	KNOB - choke control	1			trol rod	1
3	301912	COTTER PIN	1	52	204486	ROD - throttle control	1
4	306544	WASHER	1	53	303316	SPRING - bell crank choke	
5	303738	PIN - choke link	1			lever	1
6	553816	LINK - choke knob to choke		54	306463	COTTER PIN	1
		rod	1	55	307596	WASHER	1
7	204490	DETENT - choke link	1	56	204487	BELLCRANK - choke	1
8	303247	SCREW	1	57	204491	SPRING - return	1
9	305894	WASHER	1	58	307045	SCREW	5
10	204757	BOW WASHER	1	59	302994	GASKET - float chamber	
11	592931	ARM & SHAFT ASSEMBLY	1			to carburetor	1
12	204489	CHOKE ARM	1	60	303479	NUT - high speed needle	
13	553789	CONTROL KNOBS - high &				valve	1
		low speed	2	61	553746	NEEDLE VALVE - high	
14	202139	RETAINING RING	1			speed	1
15	204757	BOW WASHER	1	62	307583	VALVE PACKING	2
16	553787	LINK - slow speed valve		63	377785	FLOAT CHAMBER &	
		arm	1			NIPPLE ASSEMBLY	1
17	204708	RETAINER - link to arm &		64	303041	SCREW	1
		shaft assembly	1	65	300096	HINGE PIN - float	1
18	204705	ARM - slow speed valve	1	66	375919	FLOAT - assembly	1
19	300646	SCREW	2	67	375985	FLOAT VALVE & SEAT	1
20	278047	SUPPORT ASSEMBLY -		68	301996	WASHER - float valve	
		carburetor linkage	1			seat	1
21	203276	SPRING - cam follower	1	69	302984	GASKET - float chamber	
22	130618	SCREW	7			body boss	1
23	302376	LOCKWASHER	7	70	303175	NOZZLE - high speed	1
24	304294	SCREW	1	71	593170	CARBURETOR BODY/	
25	304779	GASKET - leaf plate to				BELL CRANK SHAFT	
		manifold	1			ASSEMBLY	1
26	302104	SCREW	1	72	303479	NUT - slow speed	
27	203269	GASKET - leaf plate to				needle valve	1
		crankcase	1	73	307583	VALVE PACKING	2
*	377908	LEAF PLATE ASSEMBLY	1	74	553788	NEEDLE VALVE - slow	
28	306556	NUT	2			speed	1
29	306546	LOCKWASHER	2	75	303947	BUSHING - needle valve	1
30	301858	SCREW	2	76	303049	COTTER PIN	1
31	203234	LEAF STOP	2	77	303048	WASHER	1
32	203246	LEAF - carburetor	2	78	303760	SCREW	4
33	307165	LEAF PLATE	1	79	303174	THROTTLE VALVE	1
34	376729	ARM - cam follower	1	80	303119	SPRING - throttle shaft	1
35	304572	SCREW	1	81	376954	THROTTLE SHAFT &	
36	303048	WASHER	1			LEVER ASSEMBLY	1
37	306463	COTTER PIN	1	82	303126	CHOKE VALVE	1
38	203363	RETAINER - cam follower	1	83	278246	CHOKE LEVER &	
39	203362	ROLLER - cam follower	1			SHAFT ASSEMBLY	1
40	303279	BUSHING - cam follower	2	84	202310	EXPANSION PLUG	1
41	304919	CAM FOLLOWER - throttle	1	85	203355	WASHER	1
42	306320	NUT	2	86	306408	SCREW	2
43	306799	LOCKWASHER	2	87	306358	WASHER	2
44	203237	GASKET - manifold to		88	304889	SCREW	2
		carburetor	1	89	306431	SCREW	4
*	592928	CARBURETOR ASSMBLY	1	90	377605	AIR SILENCER - upper	1
45	307565	RETAINING PIN	1	92	307404	AIR SILENCER - lower	1
46	203727	LINK - throttle lever to		93	377899	MANIFOLD - carburetor	1
		cam follower	1	94	302822	STUD - manifold to	
47	307565	PIN - link	1			carburetor	2
48	304216	BUSHING - throttle control		95	306158	SCREW - seat and pad as-	
		link	1			sembly to silencer	2
49	131249	SCREW	1	96	592927	SEAT & PAD ASSEMBLY	1
50	303497	WASHER	1				

*Not shown.

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

POWER HEAD

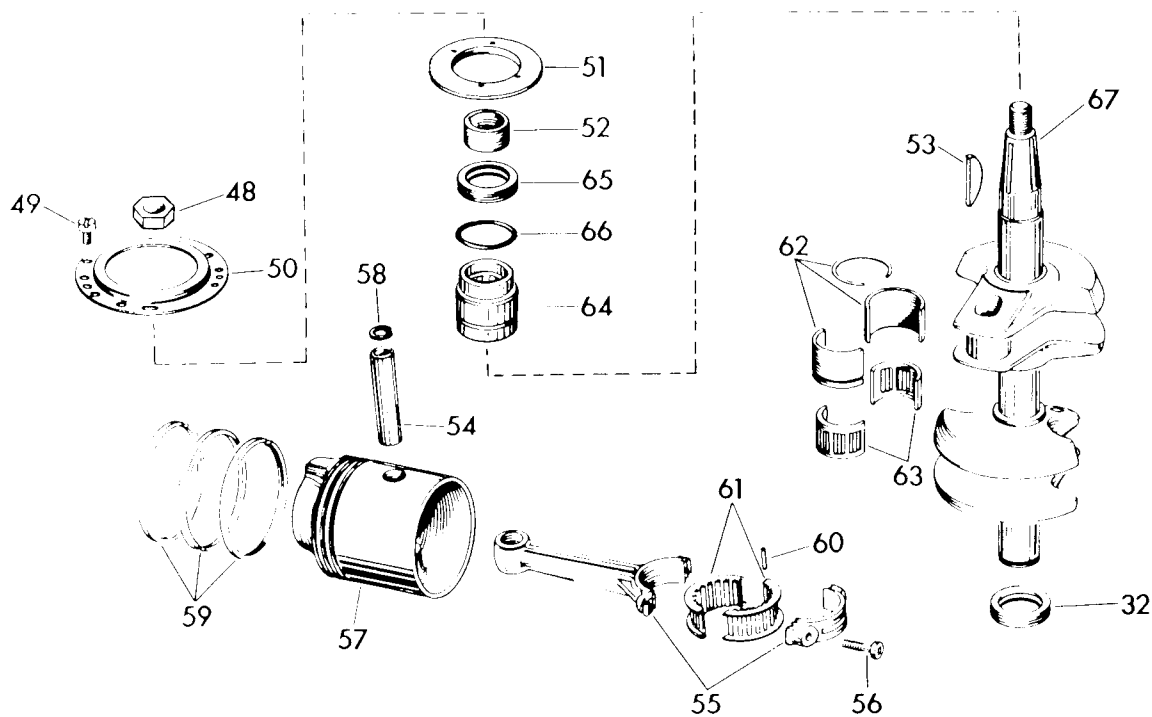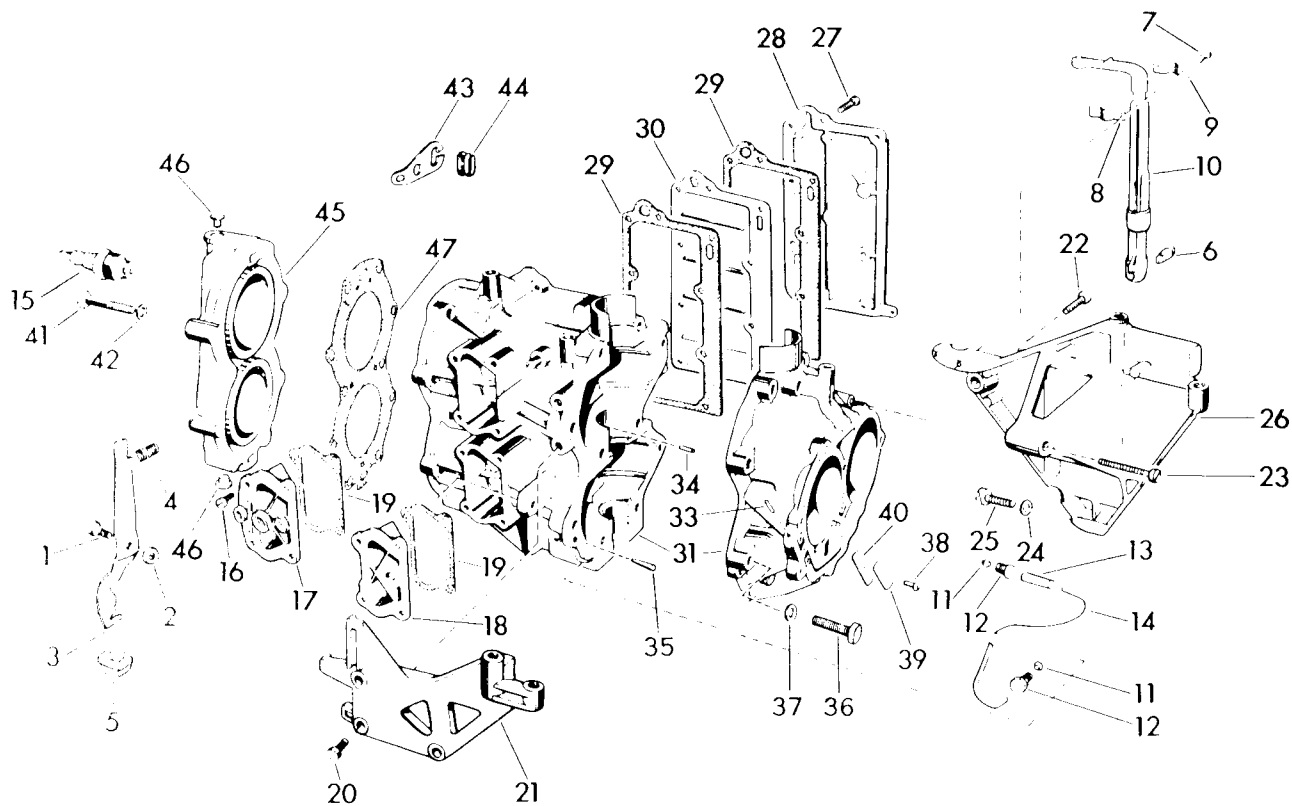


POWER HEAD

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1.	302592	SCREW	1	33	301732	. PLUG - oil passage . .	1
2	304051	LOCKWASHER	1	34	302037	. DOWEL - upper & lower bearing	2
3	203596	LOCK - shifter	1	35	300402	. TAPER PIN	2
4	302587	SPRING - shifter lock . .	1	36	306435	SCREW	4
5	306222	GROMMET - shifter lock .	1	37	306371	WASHER	4
6	304155	PIN - lever to throttle control	1	38	306402	SCREW	1
7	303737	SCREW	2	39	203248	PLATE leaf valve oil drain	1
8	303109	CLAMP - control lever bearing	1	40	203235	VALVE - leaf - crankcase oil drain	1
9	305609	CLAMP - control lever bearing	1	41	306423	SCREW	10
10	203805	CONTROL LEVER	1	42	306371	WASHER	9
11	306329	GLAND	2	43	304763	ANCHOR - ignition lead .	1
12	307564	NUT	2	44	300454	GROMMET - ignition lead	1
13	302811	SPACER	1	45	592884	CYLINDER HEAD & CORE PLUG ASSEMBLY	1
14	203723	OIL LINE TUBE	1	46	202310	. PLUG - core	2
15	378101	SPARK PLUG - Champion J4J	2	47	203247	GASKET - cylinder head .	1
15	378368	SPARK PLUG - Auto Lite A21X	2	48	301988	NUT	1
15	378320	SPARK PLUG - AC M42K	2	49	304442	SCREW	3
16	304890	SCREW	8	50	303278	SUPPORT - armature plate	1
17	552213	BY-PASS COVER - upper .	1	51	303277	RING - retaining - armature plate	1
18	203253	BY-PASS COVER - lower .	1	52	510168	CAM - magneto	1
19	203259	GASKET - by-pass to cyl.	2	53	120395	KEY - crankshaft	1
20	306404	SCREW	4	54	203238	PIN - piston	2
21	203721	BRACKET - mounting - starter & silencer - starboard	1	55	277205	CONNECTING ROD ASSEMBLY	2
22	306408	SCREW - bracket - port .	1	56	202967	. SCREW	2
23	130618	SCREW - long - mounting bracket to cylinder . . .	1	57	277413	PISTON, DOWEL PIN & RETAINING RING ASSY.	2
24	306358	WASHER	1	58	302577	. RETAINING RING . . .	2
25	551793	SCREW	1	59	486278	RING Set - piston , , . .	1
26	306194	BRACKET - mounting - starter & silencer - port	1	60	378151	NEEDLE SET - conn. rod	2
27	304888	SCREW	9	61	203244	RETAINER - connecting rod bearing	2
28	203724	EXHAUST COVER - outer	1	62	302585	SPLIT SLEEVE - center bearing	1
29	203257	GASKET - exhaust cover - inner and outer	2	63	378155	RETAINER & NEEDLE - center bearing	1
30	203258	EXHAUST COVER - inner	1	64	377528	ROLLER BEARING ASSEMBLY - upper . . .	1
31	592878	CYLINDER & CRANKCASE ASSEMBLY	1	65	305987	. SEAL - upper bearing .	1
32	303804	. SEAL - lower bearing .	1	66	302537	O-RING - upper bearing .	1
				67	307659	CRANKSHAFT	1

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

LOWER UNIT & BRACKET

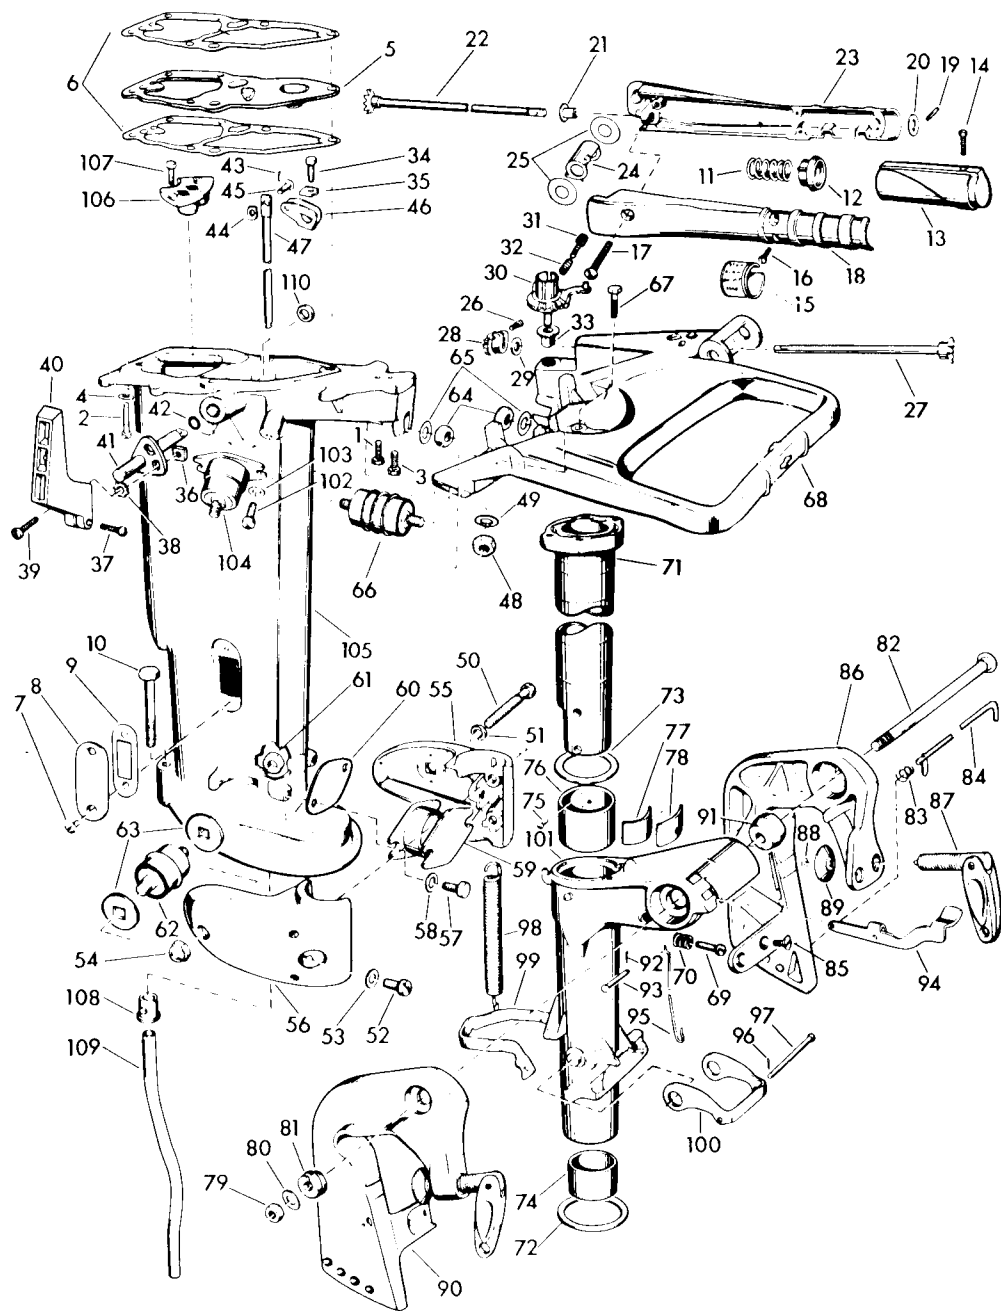

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	551793	SCREW	1	*10	307158	SCREW - rear	1
2	307153	SCREW	5	11	301656	SPRING - twist grip	1
3	204593	SCREW	1	12	552862	BLOCK - grip friction	1
4	302376	LOCKWASHER	5	13	305001	GRIP	1
5	306210	BAFFLE - powerhead to lower unit	1	14	302710	SCREW	1
6	306199	GASKET - powerhead to lower unit	2	15	203260	PLATE - throttle control	1
7	302509	SCREW	2	16	133452	SCREW	2
8	303862	PLATE - exhaust housing cover	1	17	303078	SCREW	1
9	304023	GASKET - exhaust housing cover plate	1	18	303093	STEERING HANDLE - inner half	1
				19	300346	PIN - groove - gear & shaft	1
				20	303252	WASHER	1
				21	305100	BUSHING - steering handle	1

*Standard length models only.

LOWER UNIT & BRACKET


Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
22	377943	THROTTLE CONTROL GEAR & SHAFT, LONG . . .	1	69	301989	SCREW	1
23	303094	STEERING HANDLE - outer half	1	70	551113	SPRING - co-pilot	1
24	303096	COVER - steering handle gears	1	71	303853	SHAFT - pilot - steering bracket	1
25	303079	WASHER	1	72	303865	WASHER - thrust	1
26	306543	SCREW	2	73	303842	WASHER - thrust	1
27	377631	THROTTLE CONTROL GEAR & SHAFT ASSEMBLY, SHORT	1	74	303841	SHOCK ABSORBER - lower - swivel bracket	1
28	303142	PINION - throttle control . .	1	75	303696	PIN - swivel bracket to upper liner	1
29	303107	WASHER	1	76	303846	LINER - upper swivel bracket	1
30	304931	GEAR - throttle control . . .	1	77	303843	SPACER - co-pilot plate to upper liner	1
31	304573	SCREW	1	78	303844	CO-PILOT PLATE	1
32	552368	SPRING - idle stop screw . .	1	79	306386	NUT	1
33	303854	BUSHING	1	80	306433	WASHER	1
34	303722	SCREW	1	81	302051	SPRING - tilting shaft . . .	1
35	303721	CLIP - shift rod lever	1	82	301984	BOLT - tilting shaft	1
36	303189	NUT	1	83	307653	SPRING - thrust rod	1
37	300258	SCREW	1	84	378158	THRUST ROD AND RETAINER ASSY. - stern angle adjust	1
38	303480	LOCKWASHER	1	85	303396	SCREW - port to starboard	2
39	306468	SCREW	1	86	378157	STERN BRACKET AND CLAMP SCREW ASSY - port	1
40	592898	SHIFT LEVER & PIN ASSEMBLY	1	87	375742	CLAMP SCREW - swivel plate and retainer . . .	1
41	377581	ADJUSTING LEVER & SHAFT ASSEMBLY	1	88	302420	RETAINER	1
42	303191	O-RING	1	89	307561	PLATE - swivel	1
43	306376	PIN - cotter	1	90	378156	STERN BRKT. & CLAMP SCREW ASSY. - starboard (Incl. items 87, 88 & 89)	1
44	304380	BOW WASHER	1	91	301983	CONICAL WASHER - tilting shaft	2
45	304377	PIN - shift rod to lever	1	92	303049	COTTER PIN	1
46	304378	LEVER - shift rod	1	93	303930	SHAFT - reverse locking lever pivot	1
47	304859	SHIFT ROD - upper	1	94	303980	LEVER ARM - manual locking	1
48	303889	NUT	2	95	303978	LINK - reverse lock arm to shaft	1
49	303884	WASHER	2	96	306376	COTTER PIN	1
50	303898	SCREW	2	97	303949	ROD - reverse lock	1
51	304144	LOCKWASHER	2	98	303979	SPRING - reverse lock locking lever	1
52	303883	SCREW	2	99	303948	LEVER - reverse locking	1
53	303886	WASHER - medium	2	100	303950	LINK - reverse lock	1
54	303890	NUT	2	101	303840	SWIVEL BRACKET	1
55	303896	HOUSING - lower mount - port	1	102	306461	SCREW	4
56	303897	HOUSING - lower mount - starboard	1	103	303887	WASHER	4
57	303888	SCREW	2	104	303879	RUBBER MOUNT - upper side exhaust tube	2
58	303886	WASHER	2	105	378063	EXHAUST HOUSING AND PLATE	1
59	303881	RUBBER MOUNT - exhaust tube - lower front	1	106	304880	PLATE - exhaust tube . . .	1
60	304169	GASKET - lower front mount	1	107	306431	SCREW	2
61	303890	NUT	2	108	302497	GROMMET - water tube - upper	1
62	303880	RUBBER MOUNT - exhaust tube - lower side	2	*109	303917	TUBE - water	1
63	304168	GASKET - mount - lower side	4	110	303775	WASHER	1
64	303889	NUT	2				
65	303884	WASHER - large	2				
*66	303878	RUBBER MOUNT - upper front - exhaust tube	1				
†66	304800	RUBBER MOUNT - upper front - exhaust tube	1				
67	306409	SCREW	4				
68	377630	STEERING BRACKET & BUSHING	1				

*Standard length models only.

†Long shaft models.

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

GEAR CASE

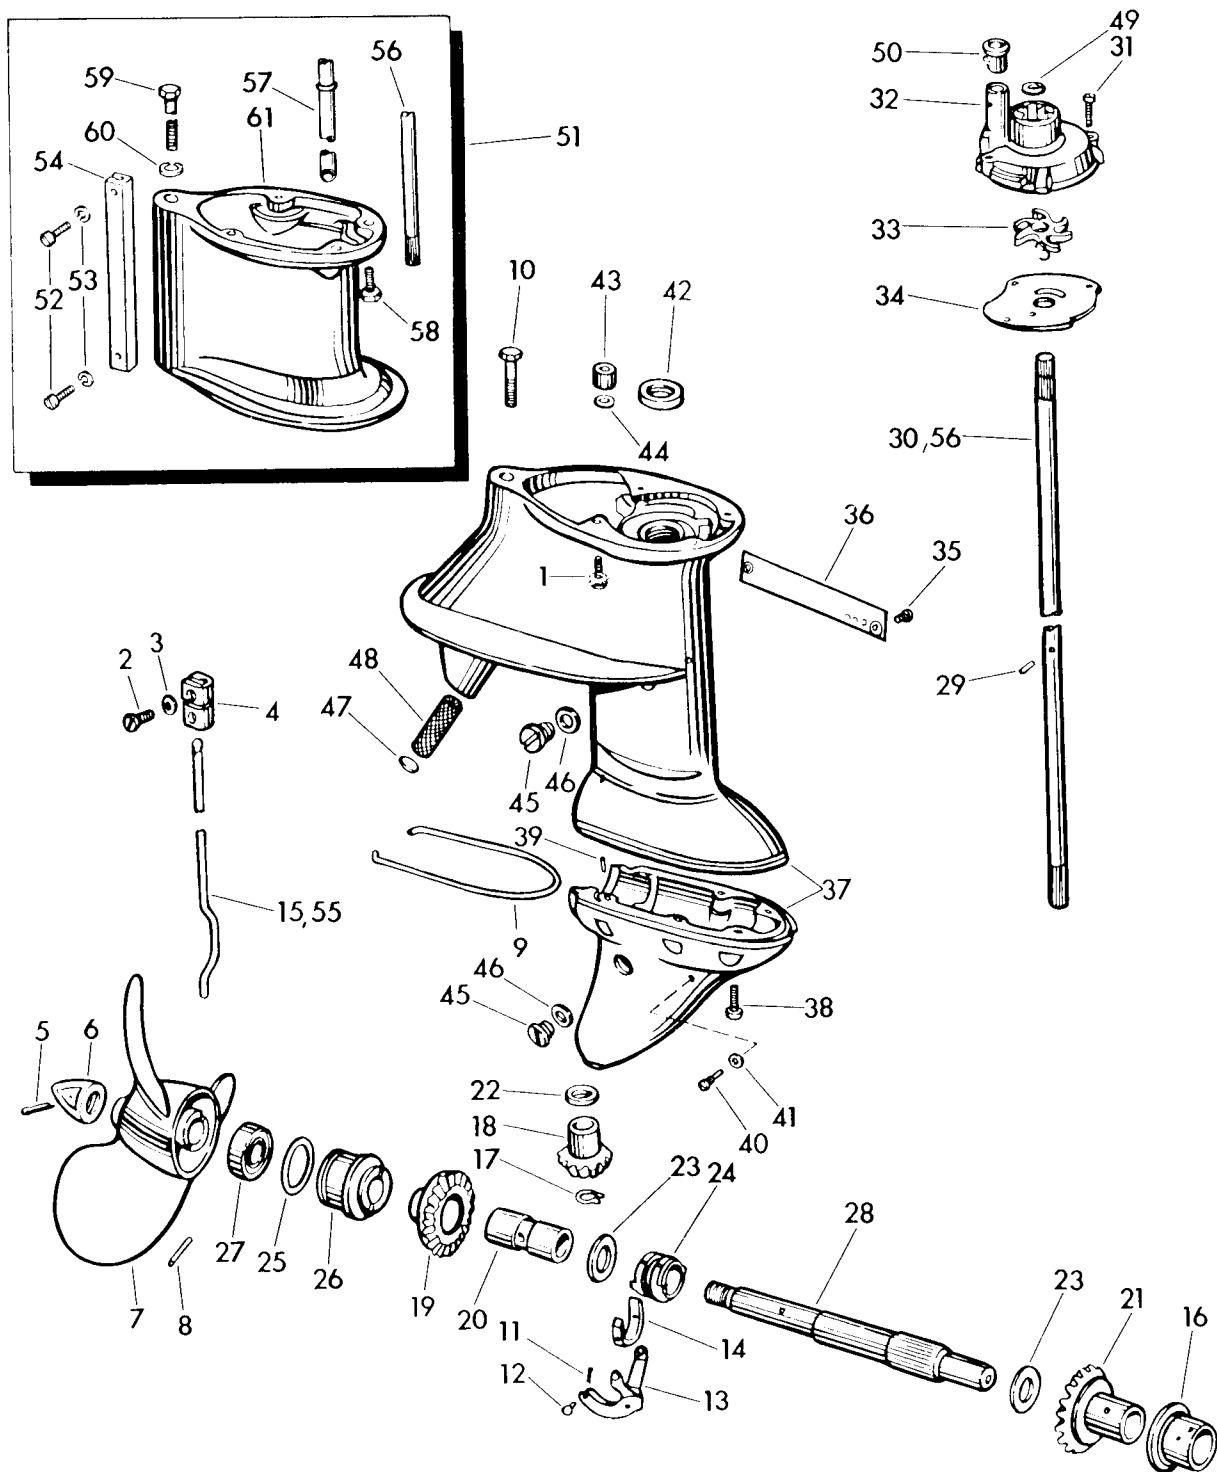

GEAR CASE

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	307155	SCREW	4	31	302508	SCREW	3
2	304024	SCREW	2	32	303070	HOUSING - impeller	1
3	301551	WASHER	2	33	375638	IMPELLER - water pump	1
4	303794	CONNECTOR - shift rod	1	34	303069	PLATE - impeller housing	1
5	306394	PIN - cotter	1	35	302509	SCREW	2
6	305469	NUT - propeller	1	36	302505	COVER - water by-pass	1
7	592959	PROPELLER & BUSHING ASSEMBLY	1	37	377117	GEARCASE ASSEMBLY	1
8	307949	PIN - propeller drive	1	38	304070	. SCREW	6
9	302513	SEAL - upper to lower gearcase	1	39	300611	. DOWEL - front and rear bearing	2
*10	307158	SCREW - rear	1	40	303358	. PIN - shifter lever pivot	1
11	306376	PIN - cotter	1	41	304083	. WASHER	1
12	302504	PIN - yoke to shift rod	1	42	307563	. SEAL - driveshaft	1
13	376164	SHIFTER LEVER AND PIN ASSEMBLY	1	43	301878	. BUSHING - shift rod - lower	1
14	302500	CRADLE	1	44	301877	. O-RING	1
*15	303098	SHIFT ROD - std. length lower	1	45	307551	. PLUG - oil	2
16	302496	BEARING - front	1	46	307552	. WASHER	2
17	301883	RING - retaining	1	47	300314	. PLUG - water intake screen	1
18	307486	PINION - driveshaft	1	48	302757	. SCREEN - water intake	1
19	307485	GEAR - rear reversing	1	49	303067	O-RING	1
20	303997	BUSHING	1	50	302497	GROMMET - water tube - lower	1
21	378079	GEAR AND BUSHING - front	1	51	377468	EXTENSION KIT ASSY.	1
22	303996	WASHER - thrust	1	52	304024	. SCREW	2
23	301884	WASHER - thrust	2	53	301551	. LOCKWASHER	2
24	305191	SHIFTER - clutch dog	1	54	304081	. CONNECTOR - shift rod	1
25	302493	O-RING	1	†55	303257	. SHIFT ROD - 5" longer, lower	1
26	377112	GEARCASE HEAD AND BEARING ASSEMBLY	1	†56	304036	. DRIVESHAFT - long	1
27	302545	. SEAL - propeller shaft	1	†57	304037	. WATER TUBE	1
28	305192	SHAFT - propeller	1	†58	307155	. SCREW	4
29	300771	PIN - pump impeller	1	†59	304135	. SCREW - rear	1
*30	303860	SHAFT - drive	1	†60	307161	. LOCKWASHER - rear	1
				†61	304136	. GEARCASE EXTENSION	1


*Standard length models only.

†Long shaft models.

USE OUTBOARD MARINE LUBRICANT TYPE "B."

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

FUEL TANK AND PUMP

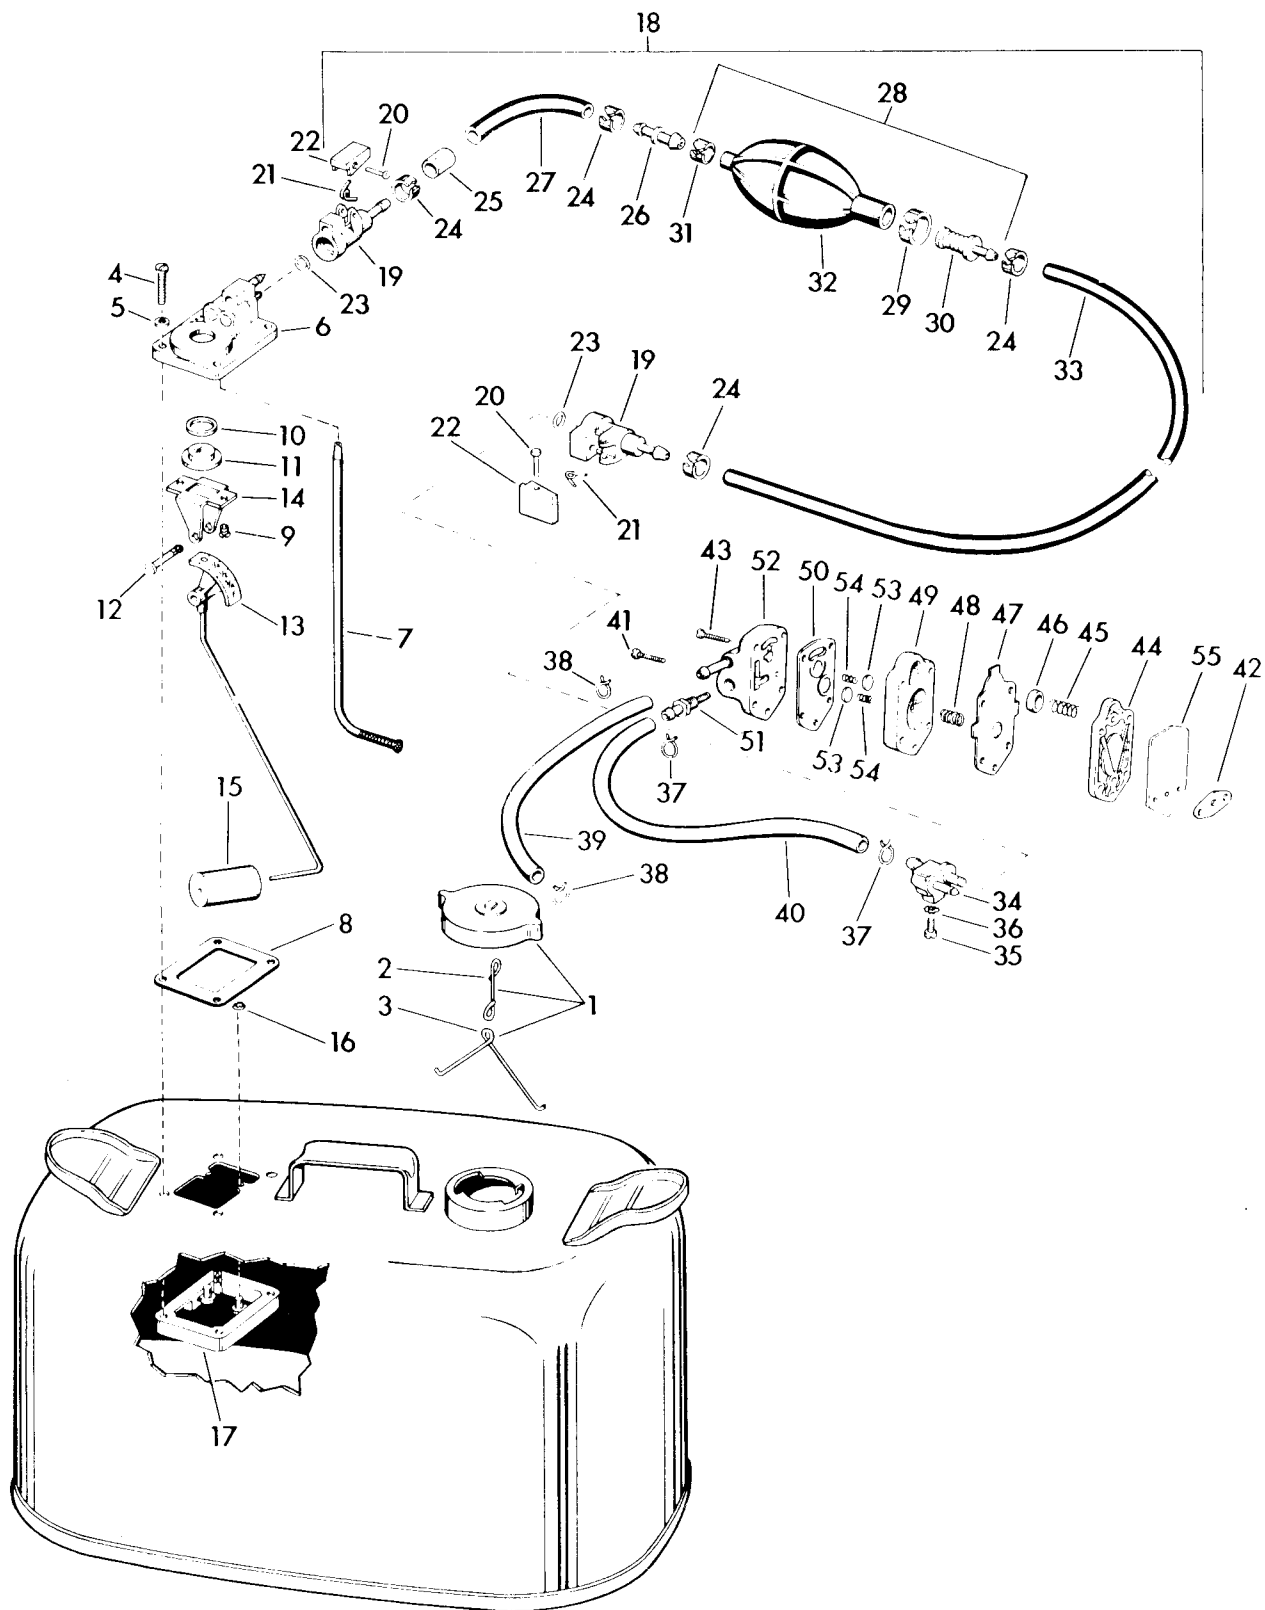


FUEL TANK AND PUMP

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
*	593191	GAS TANK ASSEMBLY . . .	1	28	592131	PRIMER BULB, NIPPLE AND CLAMP	1
1	377536	GAS CAP ASSEMBLY . . .	1	29	553166	CLAMP - large, fuel hose	1
2	305994	LINK - anchor	1	30	592242	NIPPLE AND VALVE . . .	1
3	552331	ANCHOR - gas cap . . .	1	31	303596	CLAMP - small, fuel hose	1
4	304888	SCREW	4	32	553164	PRIMER BULB	1
5	305863	WASHER	4	33	305872	HOSE - long, primer bulb to connector	1
6	378303	HOUSING	1	34	376154	BODY ASSEMBLY - fuel connector	1
7	377429	FUEL LINE AND SCREEN	1	35	306419	SCREW	1
8	305867	GASKET - gas tank to housing	1	36	306488	LOCKWASHER	1
9	302751	SCREW	2	37	302647	CLAMP - hose	2
10	302571	SEAL - glass	1	38	552199	CLAMP - hose	2
11	302568	GLASS - gas tank	1	39	303644	HOSE - fuel pump to carb .	1
12	305821	PIN - indicator	1	40	303640	HOSE - fuel pump to conn .	1
13	378295	INDICATOR	1	41	552649	SCREW	2
14	305864	SUPPORT - indicator . . .	1	42	303615	GASKET - fuel pump to bypass	1
15	302559	FLOAT - indicator	1	*	377927	FUEL PUMP ASSEMBLY . . .	1
16	305873	FASTENER - support plate	1	43	133451	SCREW	3
17	307479	PLATE - support	1	44	304089	HOUSING - outer	1
18	377433	FUEL CONNECTOR, HOSE AND PRIMER BULB ASSEMBLY	1	45	304486	SPRING - diaphragm support	1
19	376156	FUEL CONNECTOR HOUSING	2	46	304094	SUPPORT - diaphragm . . .	1
20	301832	RIVET - lock, fuel connector	1	47	376619	DIAPHRAGM	1
21	301829	SPRING - lock, fuel connector	1	48	303662	SPRING - diaphragm . . .	1
22	301830	LOCK - fuel connector . . .	1	49	304090	HOUSING - inner	1
23	303598	O-RING - seal, fuel connector	1	50	304092	GASKET - inner housing to valve housing	1
24	303596	CLAMP - small, fuel hose	4	51	376161	NIPPLE AND SCREEN . . .	1
25	306801	SLEEVE - "tank end" . . .	1	52	378554	HOUSING AND NIPPLE ASSEMBLY	1
26	591841	NIPPLE AND VALVE ASSEMBLY	1	53	303643	VALVE - disc	2
27	305871	HOSE - primer bulb to connector	1	54	303642	SPRING - inlet and outlet	2
				55	303680	DEFLECTOR - fuel pump to gasket	1

*Not Shown

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

STARTER

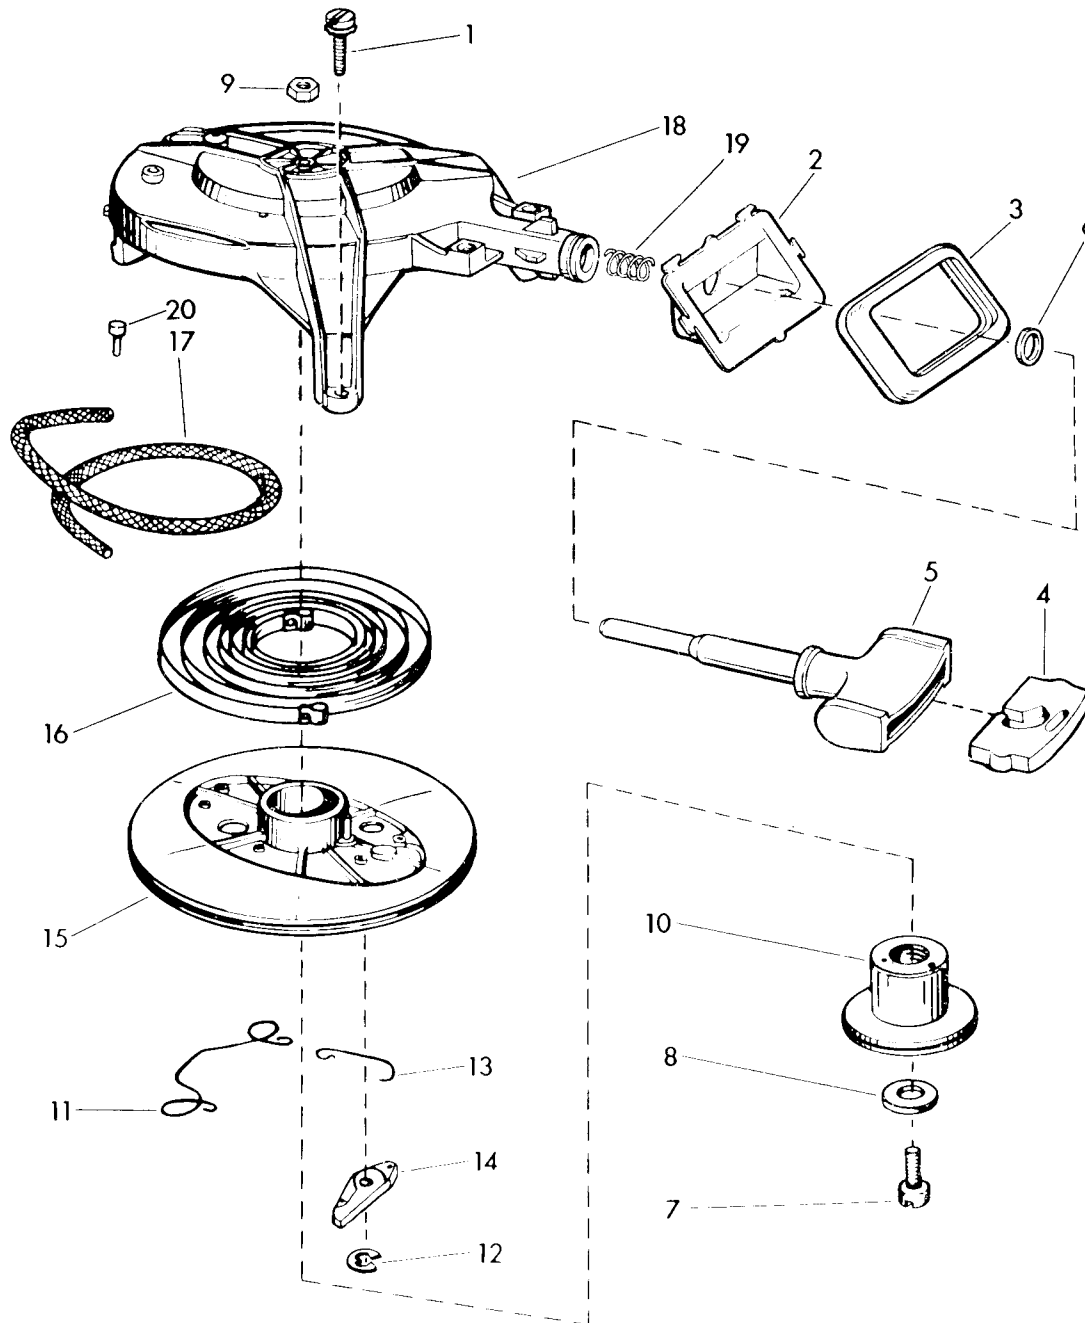

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	303288	SCREW	3	11	203697	SPRING - friction	1
*	593168	STARTER ASSEMBLY	1	12	203470	RING - retainer - starter pawl	1
2	553744	COVER - shroud front	1	13	203725	LINK - friction spring to pawl	2
3	553740	SEAL - cover - starter housing to shroud	1	14	203698	PAWL - starter	1
4	304325	ANCHOR - rope handle	1	15	591826	PULLEY - starter	1
5	553771	HANDLE - starter	1	16	307573	SPRING - starter	1
6	306181	O-RING - starter housing to cover	1	17	203821	ROPE - starter	1
7	306284	SCREW	1	18	592926	STARTER HOUSING & PIN ASSEMBLY	1
8	306283	WASHER	1	19	304235	SPRING	1
9	302103	NUT	1	20	304500	GUIDE PIN	2
10	203699	SPINDLE - starter	1				

*Not shown.

INDENTED PART DESCRIPTIONS INDICATE THE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY

Manufactured expressly for

EATON'S OF CANADA

by

OUTBOARD MARINE

Corporation of Canada Ltd.
PETERBOROUGH - CANADA