

Parts Catalogue


EATON'S

VIKING

1959

**35 HP
ELECTRIC
OUTBOARD
MOTOR**


**MODEL
35DE 12V**

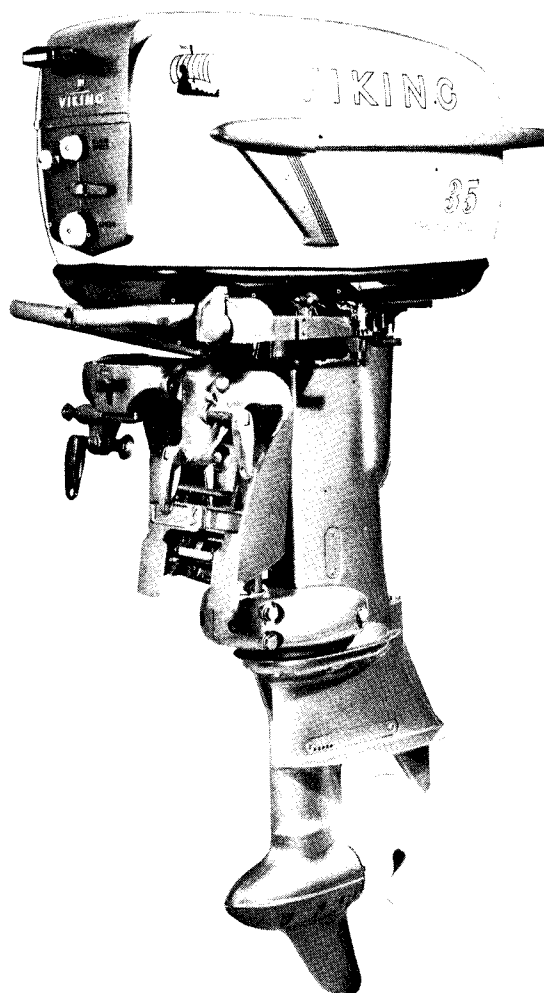


EATON'S OF CANADA

STARTER

35DE12v

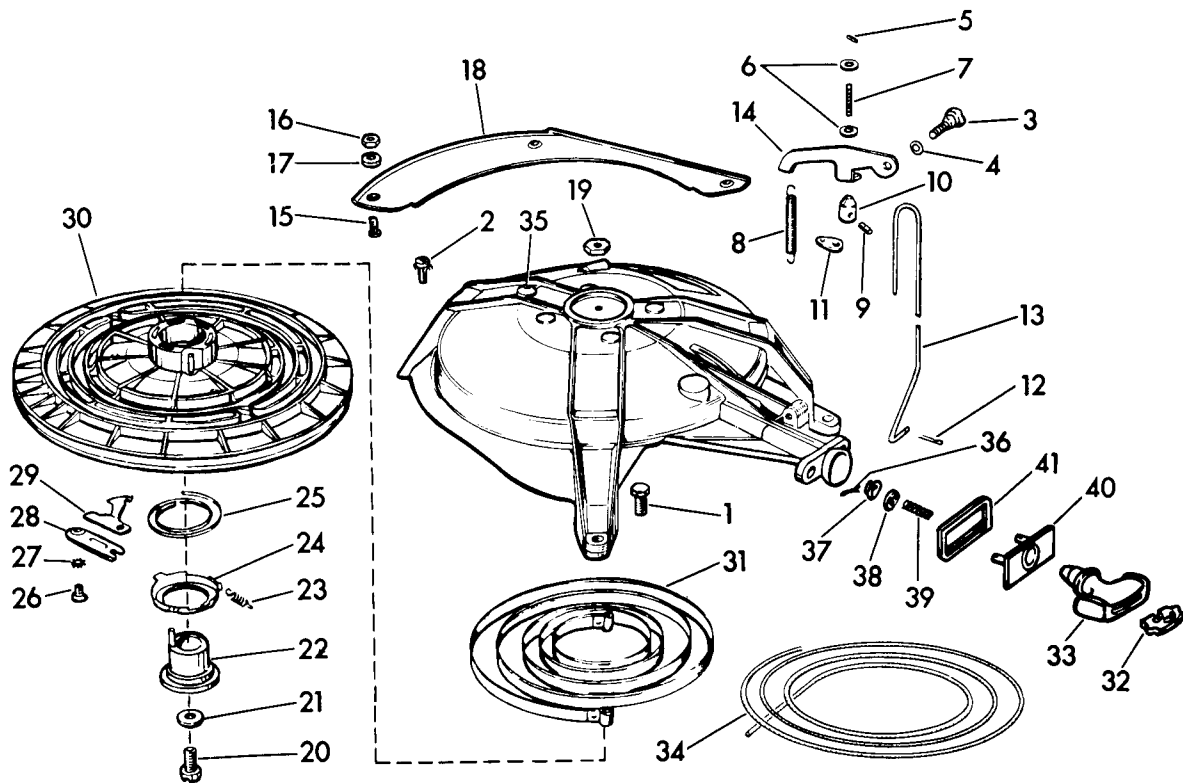


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	303591	Screw - Starter Housing to Bracket	18	304770	Guard - H.T. Leads - Starter Housing
2	304994	Screw - Starter Hsg. to Cylinder	19	302103	Nut - Spindle Screw
3	303247	Screw - Locking Lever	20	306284	Screw - Spindle to Starter Housing
4	302473	Bow Washer - Lever to Housing	21	306283	Washer - Starter Spindle
5	41-110	Pin - Rod Locking Lever	22	276643	Spindle and Pin Assembly
6	306544	Washer - Locking Lever Rod	23	202155	Spring - Equalizer Cup
7	303051	Spring - Link to Locking Lever	24	202114	Equalizer Cup
8	304224	Spring - Link to Starter Housing	25	302222	Friction Spring - Starter
9	303245	Screw - Collar - Link	26	306532	Screw - Retainer - Starter Pawl
10	303244	Collar - Link - Starter Lock	27	306528	Lockwasher - Retaining Screw
11	303033	Spring Anchor - Locking Lever Rod	28	202317	Retainer - Starter Pawl
12	306499	Cotter Pin - Locking Lever Rod	29	202470	Starter Pawl
13	304808	Rod - Locking Lever	30	376848	Starter Pulley Assembly
14	304807	Locking Lever - Starter Housing	31	375836	Starter Spring Assembly
15	306532	Screw - Guard to Starter Housing	32	304325	Anchor - Rope to Handle
16	304854	Nut - Guard to Starter Housing	33	553623	Handle - Starter
17	304510	Washer - Flywheel Guard to Starter Housing	34	305000	Rope - Starter
			35	376851	Starter Housing & Pin Assy.
			36	306463	Cotter Pin - Cover to Starter Housing
			37	303535	Grommet - Starter Housing
			38	202065	Washer - Cover to Starter Housing
			39	303518	Spring - Cover to Starter Hsg.
			40	303528	Cover - Shroud, Front
			41	303529	Grommet - Cover to Shroud

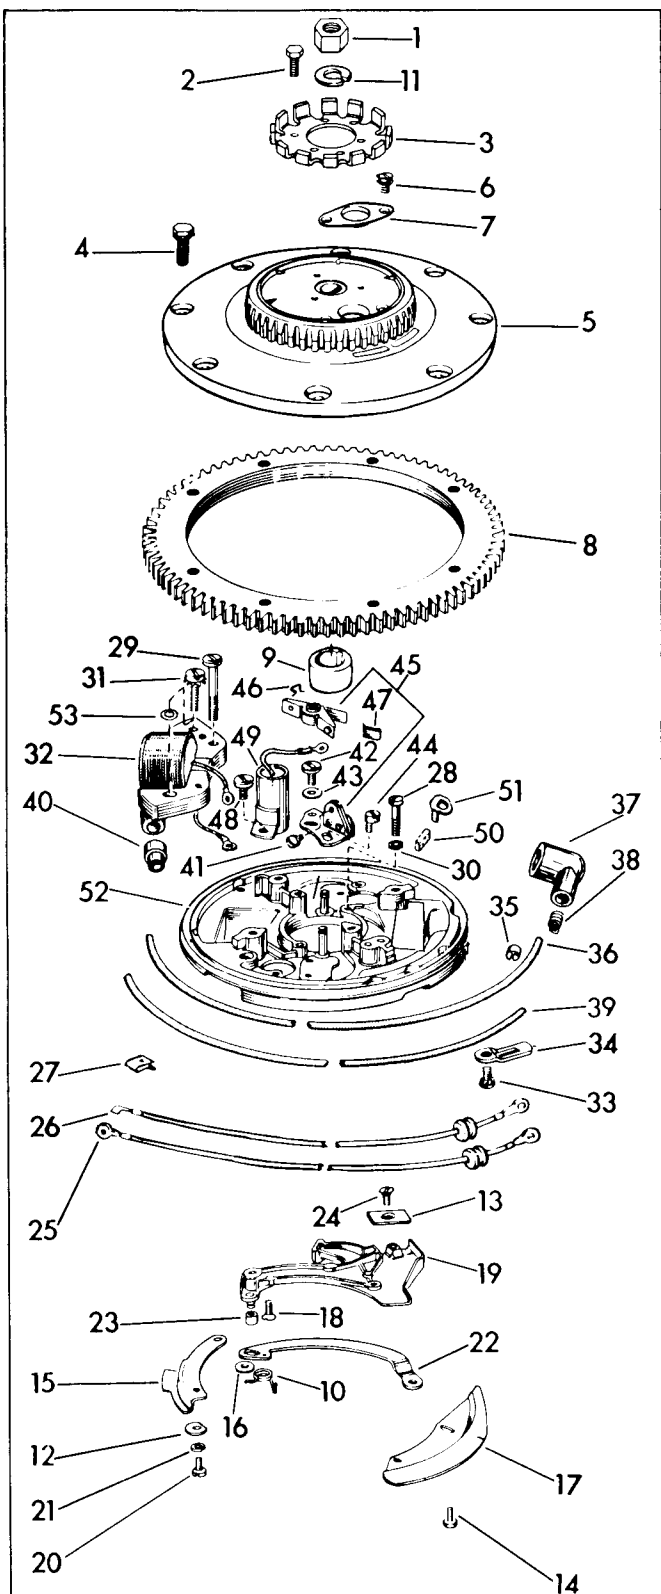

Ref. No.	Part No.	Description
1	305984	Nut - Crank Shaft
2	302468	Screw - Ratchet to Flywheel .
3	202111	Ratchet - Starter
	580281	Flywheel & Ring Gear Assy. .

Ref. No.	Part No.	Description
4	303698	. Screw - Ring Gear to Flywheel
5	580285	. Flywheel, Cover and Pulley Assembly
6	510297	. . Screw - Insp. Hole Cover .
7	510296	. . Cover - Inspection Hole .
8	203486	. Gear - Ring
9	510169	Cam - Magneto
10	304656	Spring - Link to Anchor Assy.
11	300345	Lockwasher
12	200932	Clamp - Shifter Lock Stop to Cutout Lead
13	303741	Clamp - High Tension Lead .
14	303737	Screw - Throttle Cam
15	304591	Stop - Shifter Lock
16	85-54	Washer - Anchor Pin
17	305455	Cam - Throttle Control
18	302104	Screw - Anchor to Arm. Plate .
19	376902	Anchor and Pin Assembly . . .
20	302812	Screw - Stop to Arm. Plate . .
21	306546	Lockwasher - Stop Screw . . .
22	304219	Link - Lever Control to Anchor and Pin Assembly . .
23	304352	Sleeve - Anchor Pin
24	302751	Screw - H. T. Leads to Armature Plate Anchor . . .
25	580275	Armature Plate Assembly . . .
25	580276	. Lead Assembly - Shorting Wire, Lower
26	580277	. Lead Assembly - Shorting Wire, Upper
27	510371	. Clamp - Shorting Leads to Armature Plate
28	510192	. Screw - Armature Plate . . .
29	510286	. Screw - Lamination to Plate
30	306311	. Lockwasher - Armature Plate Mounting Screw . . .
31	510397	. Screw - Lamination Mtg. . .
32	580197	. Coil and Lamination Assy. .
33	510193	. Screw - H. T. Lead Mounting
34	510190	. Clamp - H. T. Lead
35	120783	. Marker - H. T. Lead, Upper
36	580135	. High Tension Lead, Upper .
37	510232	. . Cover - Spark Plug, Rubber
38	510231	. . Terminal - Spark Plug Lead Spring
39	580146	. High Tension Lead - Lower (Incl. Items 37 and 38). . .
40	510289	. Grommet - Coil to H. T. Lead
41	510194	. Screw - Breaker Terminal .
42	510278	. Screw - Breaker Mounting .
43	510208	. Washer - Bow Breaker Mtg.
44	510185	. Eccentric Screw - Breaker .
45	580148	. Breaker Assembly
46	71-1052	. . Spring - Clip
47	510204	. . Clip - Breaker Spring . .
48	510193	. Screw - Condenser Mounting
49	510173	. Condenser
50	510189	. Wick - Oiler
51	510188	. Clip - Oiler
52	580271	. Armature Plate and Post Assembly
53	306547	. Washer

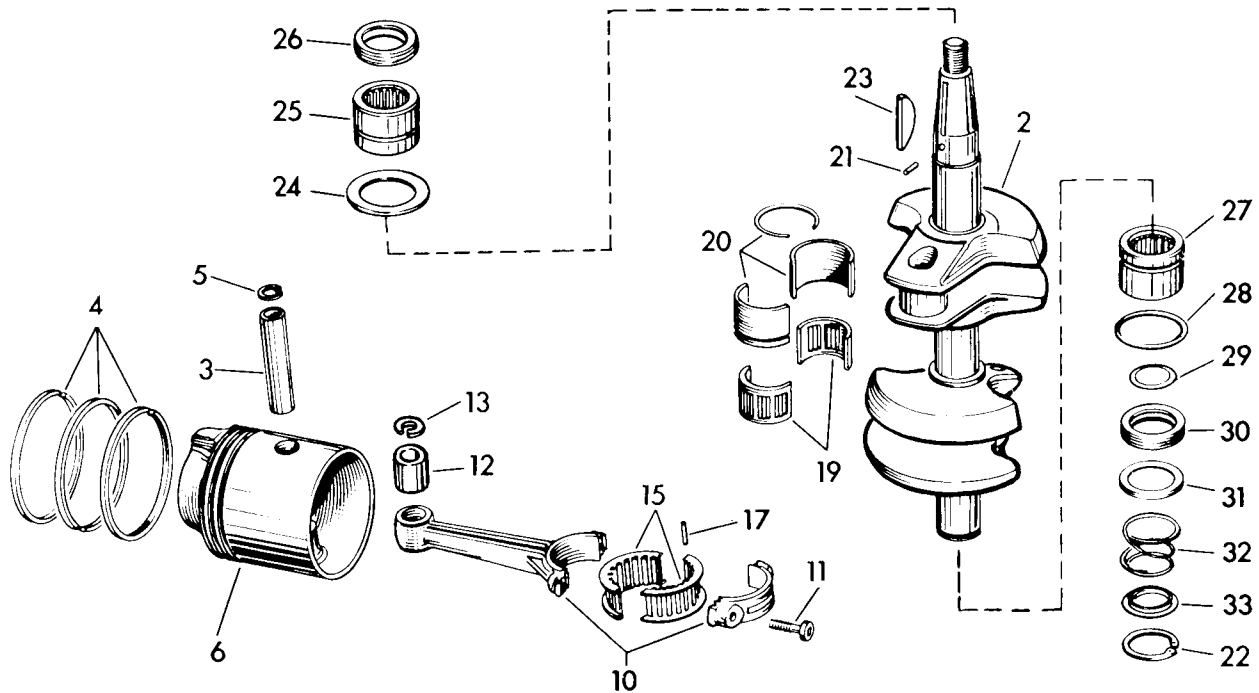


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
2	306252	Crankshaft	20	302585	Split Sleeve - Center Bearing . . .
3	304713	. Wrist Pin	21	302578	Pin - Cam to Crankshaft . . .
4	486246	. Piston Ring Set	22	302536	Retaining Ring, Lower
5	302577	. Retaining Ring - Wrist Pin . . .	23	306253	Key - Crankshaft
6	376833	. Piston and Dowel Pin Assy. . . .	24	304697	Washer - Thrust, Crankshaft . . .
	377666	Piston and Connecting Rod Assy. (Incl. Items 3, 4, 5 and 6 Above)	25	377528	Roller Bearing and Seal, Upper Journal
	377796	. Conn. Rod - Needle Brg. and Snap Ring Assy.	26	305987	. Seal, Upper Journal
10	377816	. . Connecting Rod Assembly	27	375763	Roller Bearing, Lower Journal
11	307020	. . . Screw - Connecting Rod	28	302537	"O" Ring, Lower Journal Seal
12	377664	. . Needle Bearing	29	305098	Quad Ring - Carbon Seal to Crankshaft
13	306251	. . Snap Ring	30	302538	Seal - Lower Bearing
15	306250	Retainer - Connecting Rod	31	302594	Retainer Washer - Inner Seal Spring
17	306254	Needle - Connecting Rod Bearing	32	302539	Spring - Seal
19	377855	Needle and Retainer Assembly. - Center Bearing	33	303801	Retaining Washer, Outer

CARBURETOR

35DE12V

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
17	304261	Gasket - Leaf Plate to Manifold	67	303041	. Screw - Float Chamber, Drain
18	552656	Gasket - Leaf Plate to C'case . .	68	304031	. Chamber - Float
19	302104	Screw - Leaf Plate to C'case . .	69	304601	. Nozzle - High-Speed
20	301858	Screw - Leaf Attaching	70	375798	. Float Valve and Seat Assy. .
21	306556	Nut - Leaf Screw	71	301996	. . Washer - Float Valve Seat
22	306546	Lockwasher - Leaf Screw	72	377224	. Carburetor Body, Plug and Throttle Valve Assembly .
23	304709	Stop - Leaf	73	303760	. . Screw - Choke Valve to Shaft
24	304708	Leaf	74	304772	. . Nut - Slow Speed Needle Valve
25	305361	Leaf Plate	75	43-123	. . Packing - Slow Speed Needle Valve
26	306320	Nut - Carburetor to Manifold .	76	303966	. . Needle Valve - Slow Speed
27	302598	Gasket - Manifold to Carb. . .	77	303939	. . Bushing - Needle Valve, Slow Speed
28	41-110	Pin - Cam Follower	78	302674	. . Valve - Choke
29	377290	Shorting Wire Assy. - Cutout Switch	79	376256	. . Choke - Shaft, Arm and Pin Assembly
30	306463	Cotter Pin - Cam Follower to Manifold	80	306463	. . Pin - Cotter, Throttle Shaft
31	301827	Washer - Cam Follower	81	303760	. . Screw - Throttle Valve to Shaft
32	303310	Spacer - Cam Follower	82	85-54	. . Washer - Throttle Shaft Lever
33	376477	Cam Follower Assembly	83	304056	. . Valve - Throttle
34	376478	Lever - Throttle	84	302696	. . Spring - Throttle Shaft . .
35	376901	Manifold - Intake	85	377222	. . Throttle Shaft & Arm Assy.
36	302822	. Stud - Manifold to Carb. . .	86	41-110	. . Pin - Throttle Lever Link
	377223	Carburetor Assy. Less Solenoid Assembly	87	306497	. . Screw - Clamp to Throttle Arm
	377312	Carb. and Solenoid Assembly .	88	305454	. . Link - Throttle Lever to Cam Follower
37	301912	. Pin - Cotter Solenoid Shaft .	89	305456	. . Cam Bshg. - Throttle Arm
38	303738	. Pin - Solenoid Shaft	90	305457	. . Clamp - Cam Bushing . .
39	85-54	. Washer - Solenoid Shaft Pin	91	306027	. . Washer - Packing, Slow Speed Needle Valve . . .
40	306544	. Washer - Solenoid Shaft Pin	92	306392	. . Core Plug
41	303737	. Screw - Yoke to Float Chamber		377270	Cutout Switch Assembly . . .
42	303740	. Yoke - Solenoid Lever	93	304854	. Locknut - Cutout Terminal .
43	303792	. Cover - Solenoid	94	130450	. Nut - Leads to Cutout Body
44	376610	. Solenoid Plunger Assembly .	95	305879	. Screw - Adapter to Body and Ground Terminal . . .
45	303745	. Spring - Solenoid	96	306547	. Washer
46	376806	. Solenoid Assembly	97	303723	. Washer - Insulating, Large
47	41-110	. Pin - Link	98	304183	. Washer - Insulating, Small.
48	303734	. Link - Bellcrank to Solenoid Lever	99	306286	. Screw - Adapter to Body and Nipple Assembly . . .
49	306463	. Pin - Cotter, Solenoid Shaft Lever	100	376918	. Body and Nipple Assembly .
50	303747	. Lever - Solenoid	101	304499	. Spring - Cutout Switch . . .
51	303739	. Shaft - Pivot, Solenoid Lever	102	304853	. Screw - Cutout Terminal . .
52	305011	. Spring - Bellcrank to Choke Lever	103	376881	. Diaphragm and Plate Assy.
53	306463	. Pin - Cotter, Bellcrank	104	305002	. Gasket - Adpt. to Diaphragm
54	85-54	. Washer - Bellcrank Lever . .	105	303893	. Tubing - Cutout Switch . . .
55	376255	. Bellcrank and Pin Assy. . . .	106	305382	. Mounting Adapter
56	303749	. Lever - Bellcrank to Choke Control Rod	107	304855	. Hose - Filter to Carburetor .
57	306479	. Screw - Choke Control Rod Spring	108	304855	. Hose - Cutout Switch to Manifold
58	302722	. Spring - Choke Control Rod	109	302647	. Clamp - Hose
59	303963	. Rod - Choke Control	110	303988	. Gasket - Silencer to Carb. . .
60	305020	. Nut - High Speed Needle Valve	111	203355	. Washer - Slow Speed Valve Seat to Silencer
61	43-123	. Packing - High Speed Needle Valve	112	303940	. Screw - Stop to Silencer . . .
62	304600	. Valve - Needle High Speed . .	113	203598	. Stop - Knob, High & Slow Speed
63	306357	. Screw - Float Chamber to Carburetor Body	114	306799	. Lockwasher - Carburetor Nut
64	303750	. Gasket - Carb. Body to Bowl .	115	306357	. Screw - Cutout Switch Assy. to Bracket
65	302661	. Pin - Hinge			
66	375792	. Float - Carburetor Body . .			

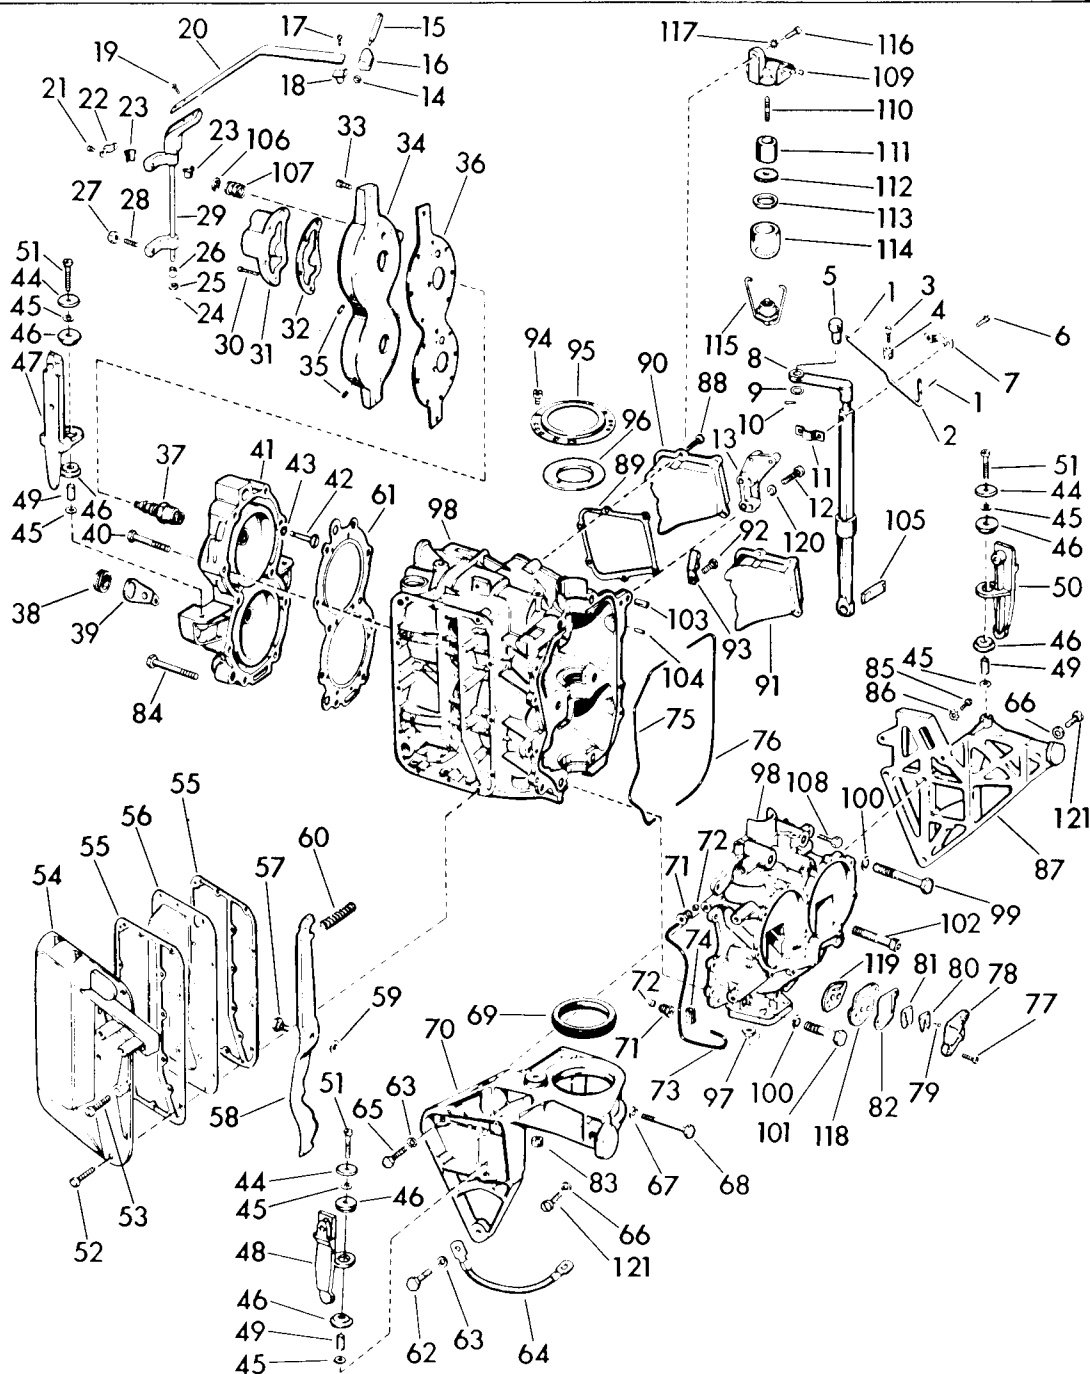

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	41-110	Pin - Control Rod to Throttle Lever and Pivot Pin	11	303109	Bearing Clamp, Inner
2	304225	Rod - Throttle Control	12	306434	Screw - Control Lever Bracket to Cylinder
3	304221	Screw - Collar Throttle Control Rod	13	304941	Brkt. - Control Lever to Cyl..
4	304222	Collar - Throttle Control Rod	14	303715	Washer - Guide Shaft to Starter Housing
5	304226	Pivot Pin - Lever Control to Link	15	304740	Shaft - Guide to Starter Hsg. .
6	302948	Screw - Control Lever Bearing Clamp	16	304738	Guide - Valve Actuating Arm .
7	305609	Bearing Clamp - Outer	17	304583	Screw - Follower to Arm . . .
8	304198	Lever - Control	18	304739	Follower - Valve Actuating . .
9	551953	Washer - Anchor Pin	19	303737	Screw - Arm to Valve Lever Assembly
10	303049	Pin - Cotter, Pivot Pin	20	304751	Arm - Valve Actuating
			21	303737	Screw - Brg. Clamp Bracket .


POWER HEAD

35DE12V

Ref. No.	Part No.	Description
22	304755	Bracket - Valve Lever
23	304749	Bushing - Upper Valve Lever .
24	300723	Pin - Cotter, Valve Lever Shaft
25	306439	Washer - Valve Lever Shaft . .
26	304750	Bushing - Lower Valve Lever .
27	304753	Nut - Adjusting Screw
28	304754	Screw - Adjusting
29	376853	Lever Assy. - Valve Actuating
30	306440	Screw - Upper Chamber to Cylinder Head
31	306280	Compression Release Chamber - Upper
32	304726	Gasket - Release Chamber, Upper
33	306434	Screw - Compression Release Chamber
34	377111	Compression Release Chamber - Lower
35	303245	. Plug - Comp. Release Chamber
36	304724	Gasket - Release Chamber to Cylinder Head
37	200322	Spark Plug and Gasket Champion J6JM
37	376290	Spark Plug and Gasket Auto Lite A3X
37	377245	Spark Plug & Gasket AC M44C.
38	300454	Grommet - Ignition Leads . . .
39	304763	Anchor - Ignition Leads
40	305027	Screw - Cylinder Head
41	376840	Cylinder Head
42	377075	Valve - Comp. Release
43	304598	. "O" Ring - Release Valve . .
44	302407	Washer - Cover Mtg., Large . .
45	306482	Washer - Cover Mtg., Small . .
46	302405	Grommet - Shroud Mtg. Brkt. .
47	552504	Bracket - Cover Mtg., Rear . .
48	552506	Brkt. - Cover Mtg., Front Stbd.
49	302406	Spacer - Cover Mounting
50	553255	Brkt. Cover Mtg., Front, Port
51	306468	Screw - Cover Mtg. Bracket . .
52	306434	Screw - Exh. Cover to Cylinder
53	130618	Screw - Exhaust Cover Outer to Cylinder
54	305611	Cover - Exhaust, Outer
55	304762	Gasket - Exhaust Cover
56	304761	Cover - Exhaust, Inner
57	302592	Screw - Shifter Lock to Cylinder
58	305355	Shifter Lock
59	304051	Washer - Shifter Lock
60	302587	Spring - Shifter Lock
61	304720	Gasket - Cylinder Head
62	306418	Screw - Starboard Bracket Terminal to Crankcase
63	306488	Lockwasher - Bracket to Crankcase Screw
64	376961	Cable Assembly - Ground
65	300646	Screw - Stbd. Brkt. to C'case . .
66	306482	Washer - Brkt. to C'case Screw
67	306325	Lockwasher - Starter Bracket to Crankcase, Front
68	305006	Screw - Starter Brkt. to C'case
69	304789	Shock Absorber - Starter
70	203944	Bracket - Starboard Starter Motor Mount

Ref. No.	Part No.	Description
71	41-105	Packing Nut - Oil Line
72	306329	Gland - Oil Return
73	302630	Oil Line
74	305980	Spacer - Oil Line
75	302621	Seal - Cyl. to Crankcase, Stbd.
76	302622	Seal - Cylinder to C'case, Port
77	305346	Screw - Leaf Valve Cover to Crankcase
78	302033	Cover - Leaf Valve
79	303761	Screw - Leaf Valve to C'case . .
80	304655	Plate - Leaf Valve
81	302031	Leaf Valve - Crankcase Drain
82	302032	Gasket - Leaf Valve Cover . . .
83	304847	Seal - Starter Motor
84	303782	Screw - Cylinder Head, Long . .
85	302030	Screw - Brkt. to C'case, Port . .
86	306488	Lockwasher - Bracket, Port . .
87	203925	Bracket - Port, Shroud and Starter Mount
88	306019	Screw - By-pass Cover
89	304784	Gasket - By-pass Cover
90	305371	Cover - By-pass, Upper
91	304815	Cover - By-pass, Lower
92	306395	Screw - Clamp to By-pass Cover
93	304790	Clamp - High Tension Leads . .
94	304442	Screw - Arm. Plate Support . . .
95	303278	Support - Armature Plate
96	303277	Retaining Ring - Arm. Plate
97	306320	Nut - Exhaust Tube to Cylinder
98	592296	Crankcase and Cylinder Assy.
99	301431	. Screw - Crankcase to Cylinder, Top
100	300343	. Washer - Top and Bottom . . .
101	302600	. Screw - Crankcase to Cylinder, Bottom
102	302579	. Screw - Crankcase to Cylinder, Center
103	300402	. Pin - Taper
104	304178	. Dowel - Center and Upper Bearings
105	304155	Pin - Throttle Gear to Control Lever
106	304706	Retainer - Valve Spring
107	304705	Spring - Release Valve
108	300646	Screw - Crankcase to Cylinder
	377599	Fuel Filter Assembly
109	376836	. Body and Nipple Assembly - Fuel Filter
110	304522	. Stud - Filter
111	302062	. Filter - Gasoline
112	304523	. Nut - Filter
113	302675	. Gasket - Filter
114	303967	. Bowl - Filter
115	377600	. Thumb Nut, Yoke & Screw Assy
116	306408	Screw - Fuel Filter to By-pass Cover
117	303480	Lockwasher
118	377196	Leaf Plate and Screen Assy.
119	305345	Gasket - Leaf Plate and Screen Assembly
120	302376	Lockwasher - Control Lever Bracket Screw
121	132679	Screw - Air Silencer to Brkt. .

EXHAUST HOUSING AND BRACKET

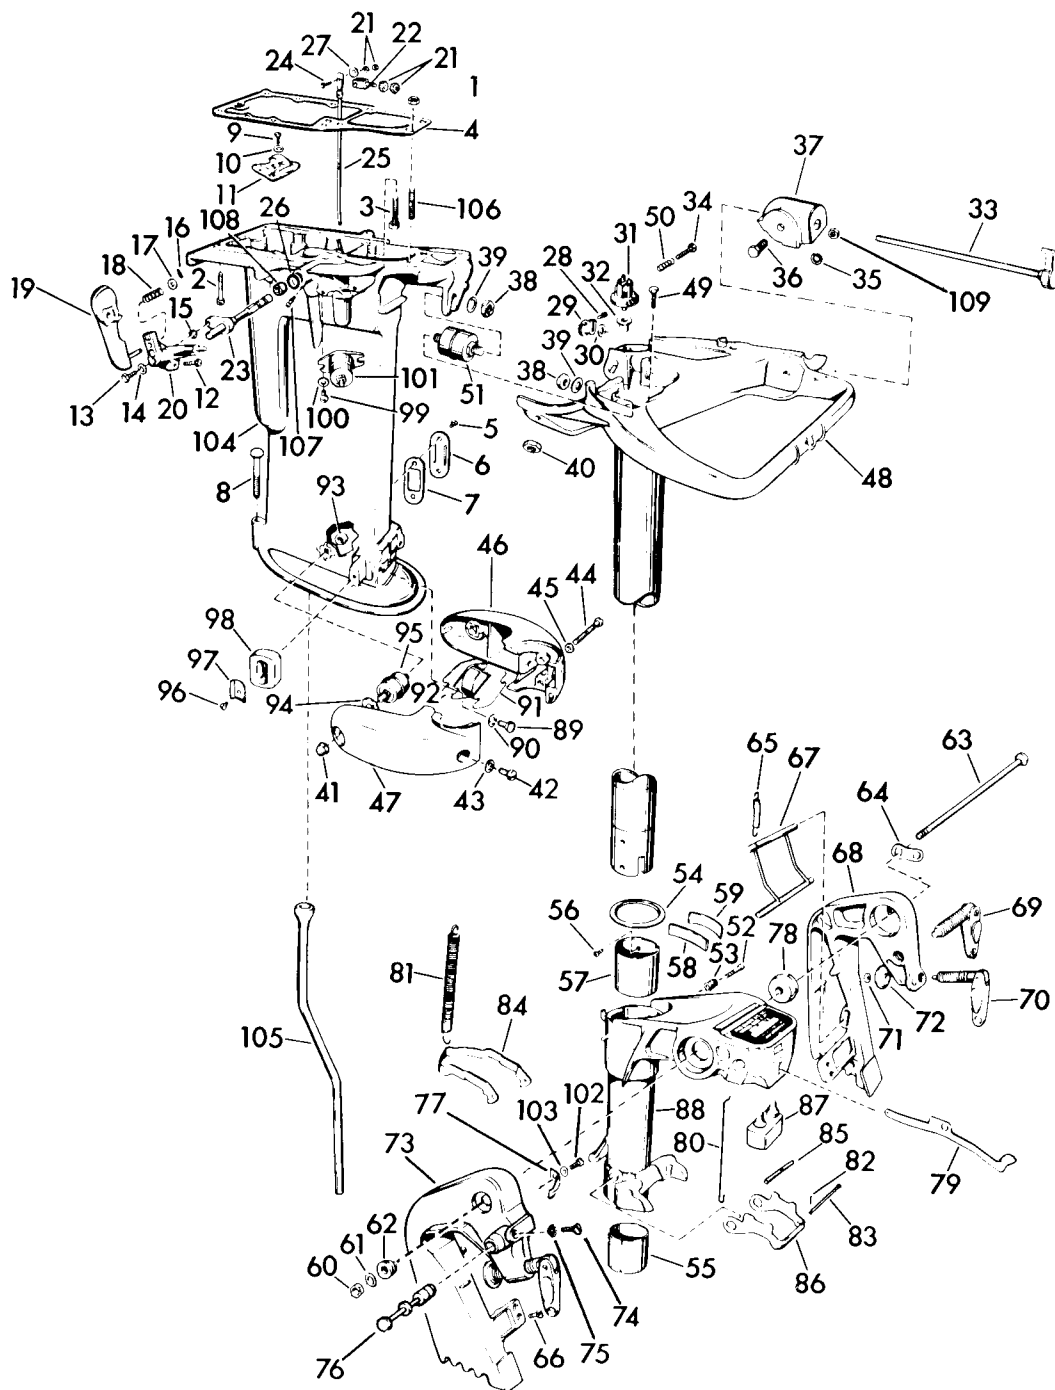


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	306320	Nut - Flange to Powerhead . .	8	302871	Screw - Exhaust Housing to Gearcase, Rear
2	132679	Screw - Exh. Tube to Cylinder	9	304012	Screw - Exhaust Loading Tube
3	303782	Screw - Exh. Tube to Cylinder	10	304454	Lockwasher - Exhaust Loading Tube
4	304545	Gasket - Exhaust Tube to Powerhead	11	304875	Exhaust Loading Plate
5	302509	Screw - Exhaust Housing Cover Plate	12	300258	Screw - Clamp, Shift Lever to Shaft
6	303862	Plate - Exhaust Housing Cover	13	300646	Screw - Shift Lever to Brkt. .
7	304023	Gasket - Exhaust Housing Cover Plate	14	306407	Washer - Screw to Shift Lever

EXHAUST HOUSING AND BRACKET

35DE12V

Ref. No.	Part No.	Description
15	306488	Lockwasher - Shift Lever to Bracket
16	552497	Pin - Straight, Gear Shift Handle
17	552783	Washer - Gear Shift Handle . .
18	552498	Spring - Gear Shift Handle . . .
19	277626	Gear Shift Handle & Pin Assy.
20	591478	Follower - Shift Lock Assy. .
21	304753	Nut - Clevis to Shift Shaft . . .
22	305824	Clevis - Shift Lever Shaft . . .
23	377397	Bracket - Shaft and Shift Lever Assembly
24	305579	Pin - Shift Rod to Clevis
25	377398	Rod - Shift, Upper
26	303191	"O" Ring - Shift Lever
27	305847	Washer - Clevis Pin
28	303951	Screw - Pinion to Shaft
29	303142	Pinion - Throttle Control . . .
30	303107	Washer - Throttle Control Pinion
31	304814	Gear - Throttle Control
32	303854	Bushing - Throttle Control . .
33	377211	Knob and Shaft Assembly, Throttle Control
34	304573	Screw - Idle Stop
35	303807	Lockwasher - Cover, Steering Bracket Screw
36	130538	Screw - Cover to Strg. Brkt. .
37	305612	Cover - Steering Bracket Throttle Control
38	303912	Nut - Upper Front Mount
39	303913	Washer - Upper Front Mount .
40	303889	Nut - Upper Side Mount
41	303890	Nut - Lower Side Mount
42	303883	Screw - Lower Mount to Shock Mount Housing
43	303886	Washer - Lower Mount to Shock Mount Housing
44	304452	Screw - Housing, Port to Stbd.
45	302865	Lockwasher - Housing Screw .
46	304446	Housing - Lower Mount, Port.
47	304447	Housing - Lower Mount, Stbd.
48	376912	Steering Bracket, Pilot Shaft and Dowel Assembly
49	304151	. Screw - Pilot Shaft to Steering Bracket
50	304865	Spring - Idle Stop Screw
51	303882	Mount - Exh. Tube, Upper Front
52	306468	Screw - Co-Pilot
53	551113	Spring - Co-Pilot
54	303867	Washer - Thrust, Pilot Shaft .
55	303868	Absorber - Shock, Swivel Bracket
56	303696	Pin - Upper Liner
57	303936	Liner - Upper Swivel Bracket.
58	303929	Spacer - Co-Pilot Plate to Liner
59	303928	Plate - Co-Pilot
60	305496	Nut - Tilting Shaft
61	306433	Washer - Tilting Shaft
62	302051	Spring - Tilting Shaft Tension.
63	305495	Bolt - Tilting Shaft


Ref. No.	Part No.	Description
64	300364	Link - Bracket
65	302736	Spring - Tilting Lever
66	306335	Screw - Stern Bracket
67	376303	Tilting Lever Assembly
68	377172	Stern Bracket and Clamp Screw Assembly, Port
69	377325	. Screw and Handle Assy. - Trailing Lock
70	377311	. Clamp Screw, Plate and Retainer Assembly
71	302420	. . Retainer - Swivel Plate . .
72	41-48	. . Plate - Swivel
73	377841	Stern Brkt., Clamp Screw & Tilt Lock Assy. - Stbd.
	377838	. Stern Bracket and Clamp Screw Assembly, Starboard (Incl. 70, 71 & 72)
74	302509	. Screw - Tilt Lock
75	307040	. Washer Tilt Lock Screw . .
76	307041	. Tilting Lock Pin
77	305289	Spring - Tilting Lock
78	302637	Washer - Conical Tilting Shaft
79	303863	Arm - Manual Locking Lever.
80	303957	Link - Reverse Lock Arm to Shaft
81	303971	Spring - Reverse Lock
82	306376	Pin - Cotter, Reverse Lock . .
83	303955	Rod - Reverse Lock
84	303954	Lever - Reverse Locking . . .
85	303956	Shaft - Reverse Lock
86	303953	Link - Reverse Lock
87	305365	Bumper - Tilting
88	553206	Swivel Bracket
89	303888	Screw - Lower, Front Mount to Exhaust Tube
90	303886	Washer - Lower, Front Mount
91	303881	Mount - Exhaust Tube, Lower Front
92	304169	Gasket - Exhaust Tube to Lower Mount
93	303890	Nut - Lower Side Mount
94	304168	Gasket - Rubber Mount
95	303880	Mount - Exhaust Tube, Lower Side
96	303393	Screw - Retainer to Exh. Tube
97	303961	Retainer - Bumper to Exhaust Tube
98	303918	Bumper - Exhaust Tube to Mounting Housing
99	306461	Screw - Upper Side Mount . .
100	303887	Washer - Upper Side Mount . .
101	303879	Mount - Exh. Tube, Upper Side
102	305683	Screw - Tilt Lock
103	303887	Washer - Tilt Lock
104	377061	Exhaust Tube Assembly
105	377060	. Tube - Water
106	304517	. Stud - Motor Hd. Adapter . .
107	304827	. Lubrication Fitting
108	304791	. Bushing
109	304364	Nut - Cover

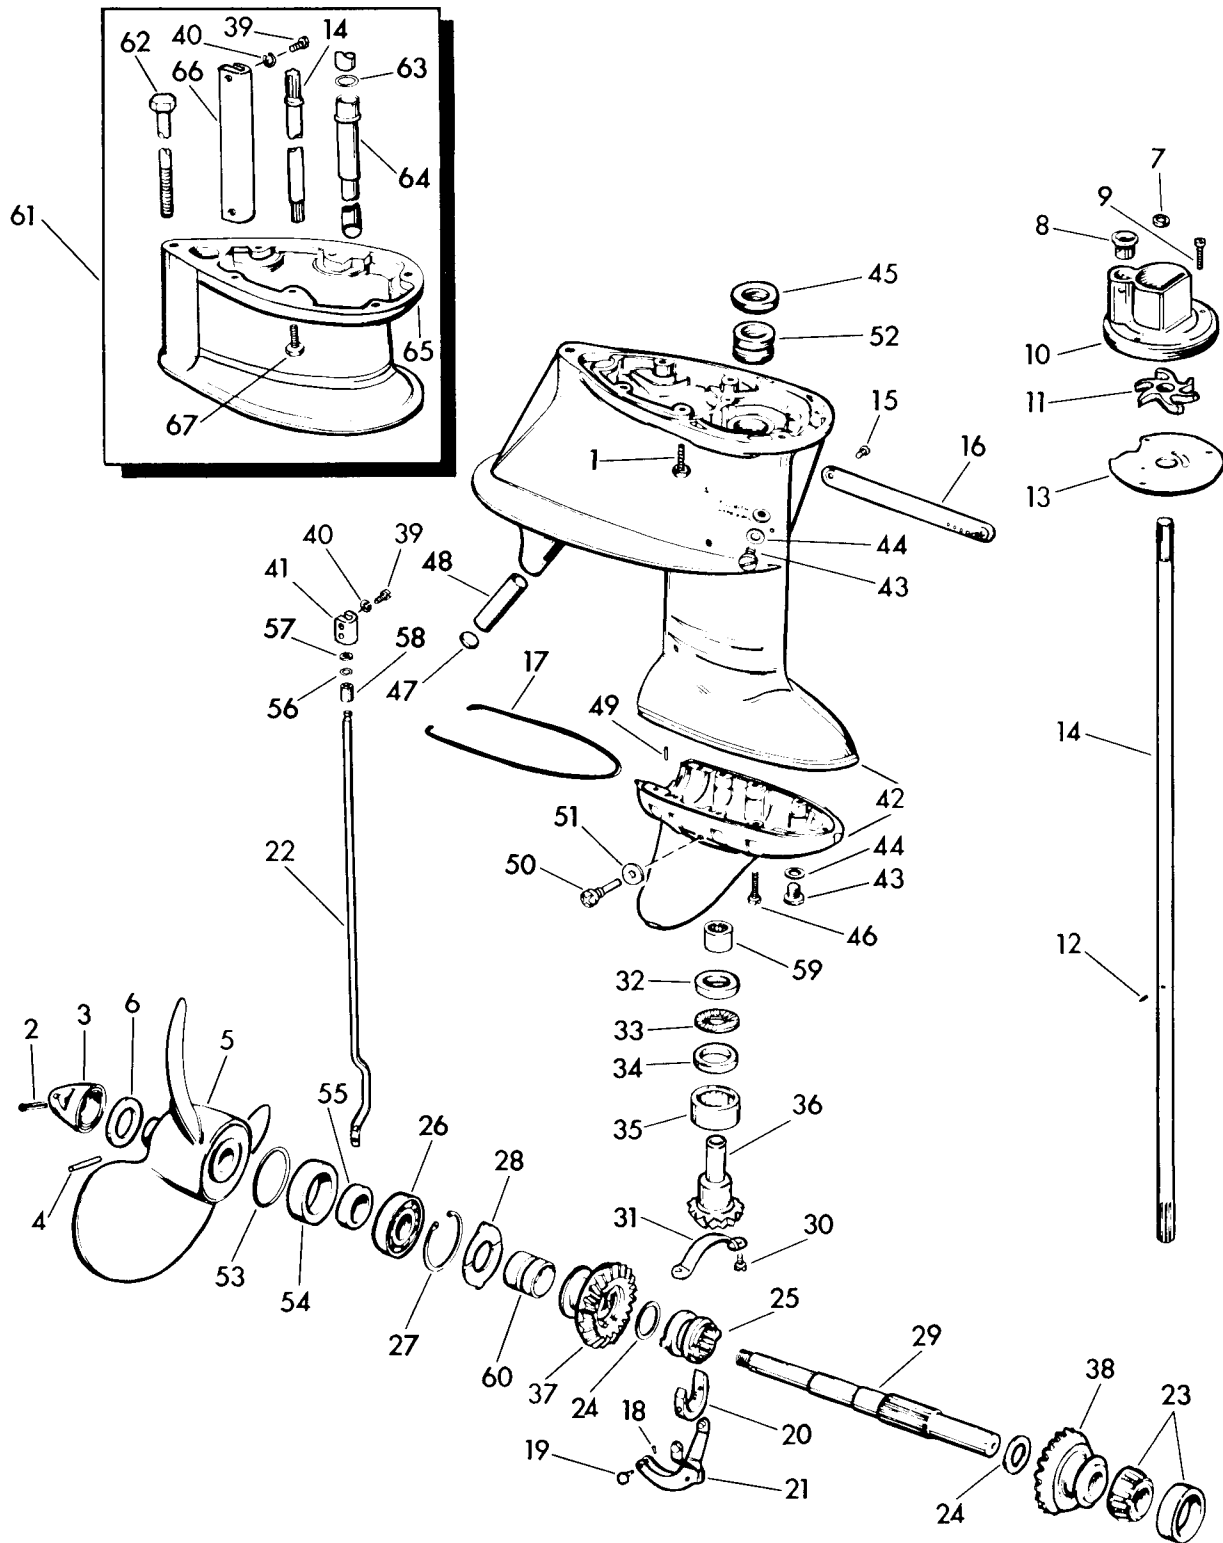

Ref. No.	Part No.	Description
1	302510	Screw - Gearcase to Exhaust Tube
2	306394	Cotter Pin - Prop. Nut
3	305294	Nut - Propeller
4	304575	Drive Pin
5	277617	Propeller and Bushing Assy. .
6	304576	Thrust Washer - Propeller . .
	377507	Gearcase Assembly Complete
7	303059	. Seal - Driveshaft to C'case .
8	304026	. Grommet - Water Tube . . .
9	302677	. Screw - Impeller Housing . .
10	303831	. Housing - Water Pump Impeller
11	375808	. Impeller - Water Pump . . .
12	300771	. Pin - Impeller
13	303866	. Plate - Impeller Housing . .
14	304933	. Driveshaft
15	302509	. Screw - Water Bypass Cover
16	302616	. Cover - Water Bypass
17	302604	. Seal - Lower to Upper Gearcase
18	306376	. Cotter Pin - Shift Lever . . .
19	302504	. Pin - Shift Rod
20	305286	. Cradle - Shift Lever
21	305288	. Shifter Lever Assembly
22	305287	. Shift Rod - Lower
23	375761	. Propeller Shaft Roller Brg. and Cup Assembly
24	302565	. Washer - Thrust, Propeller Shaft
25	305105	. Shifter Clutch Dog Assy. . . .
26	20-52	. Bearing - Ball, Propeller Shaft
27	302528	. Ring - Gearcase Retainer . . .
28	302743	. Washer - Thrust Reverse Gear
29	305104	. Shaft - Propeller
30	303737	. Screw - Driveshaft Support . .
31	302552	. Support - Driveshaft
32	304795	. Thrust Washer - Pinion, Upper
33	376857	. Pinion Thrust Bearing
34	304796	. Thrust Washer - Pinion, Lower
35	376858	. Pinion Bearing - Lower
36	304777	. Pinion
37	305293	. Gear, Rear - Reversing

Ref. No.	Part No.	Description
38	377174	. Gear & Bushing Assy. Front
39	304024	. Screw
40	301551	. Lockwasher
41	303794	. Connector - Shift Rod
42	376877	. Gearcase Assembly
43	27-283	. . Screw - Oil Drain and Fill
44	27-284	. . Washer - Drain and Fill Screw
45	302545	. . Retainer - Oil, Driveshaft
46	304070	. . Screw - Gearcase
47	300077	. . Plug - Water Intake Screen
48	302521	. . Screen - Water Intake
49	300611	. . Dowel - Gearcase to Oil Retainer
50	303358	. . Pin - Pivot, Shift Lever . . .
51	304083	. . Washer - Pivot Pin
52	304084	. . Bushing - Driveshaft to Gearcase
53	302588	. . "O" Ring - Oil Retainer Housing
54	303050	. . Housing - Oil Ret.
55	302564	. . Retainer - Oil Propeller Shaft
56	301877	. . "O" Ring - Lower Shift Rod Seal
57	304764	. . Gasket - Shift Rod Bushing to Gearcase
58	304765	. . Bushing - Lower Shift Rod . . .
59	376856	. . Pinion Bearing - Upper
60	303690	. Bushing - Reverse Gear
		Parts for motors equipped with 5" longer lower units
22	305519	Shift Rod - Lower 5 in. Longer
61	377469	Extension Kit Assembly
14	304950	. Driveshaft 5 in. Longer
62	304135	. Screw - Gearcase Extension, Rear
63	304174	. "O" Ring - Adapter
64	304175	. Adapter - Water Tube
65	304030	. Extension - Gearcase
66	304081	. Connector - Shift Rod
67	302510	. Screw - Ext. to Exh. Tube . . .
39	304024	. Screw
40	301551	. Lockwasher

STARTER MOTOR-JUNCTION BOX-SWITCH PLATE

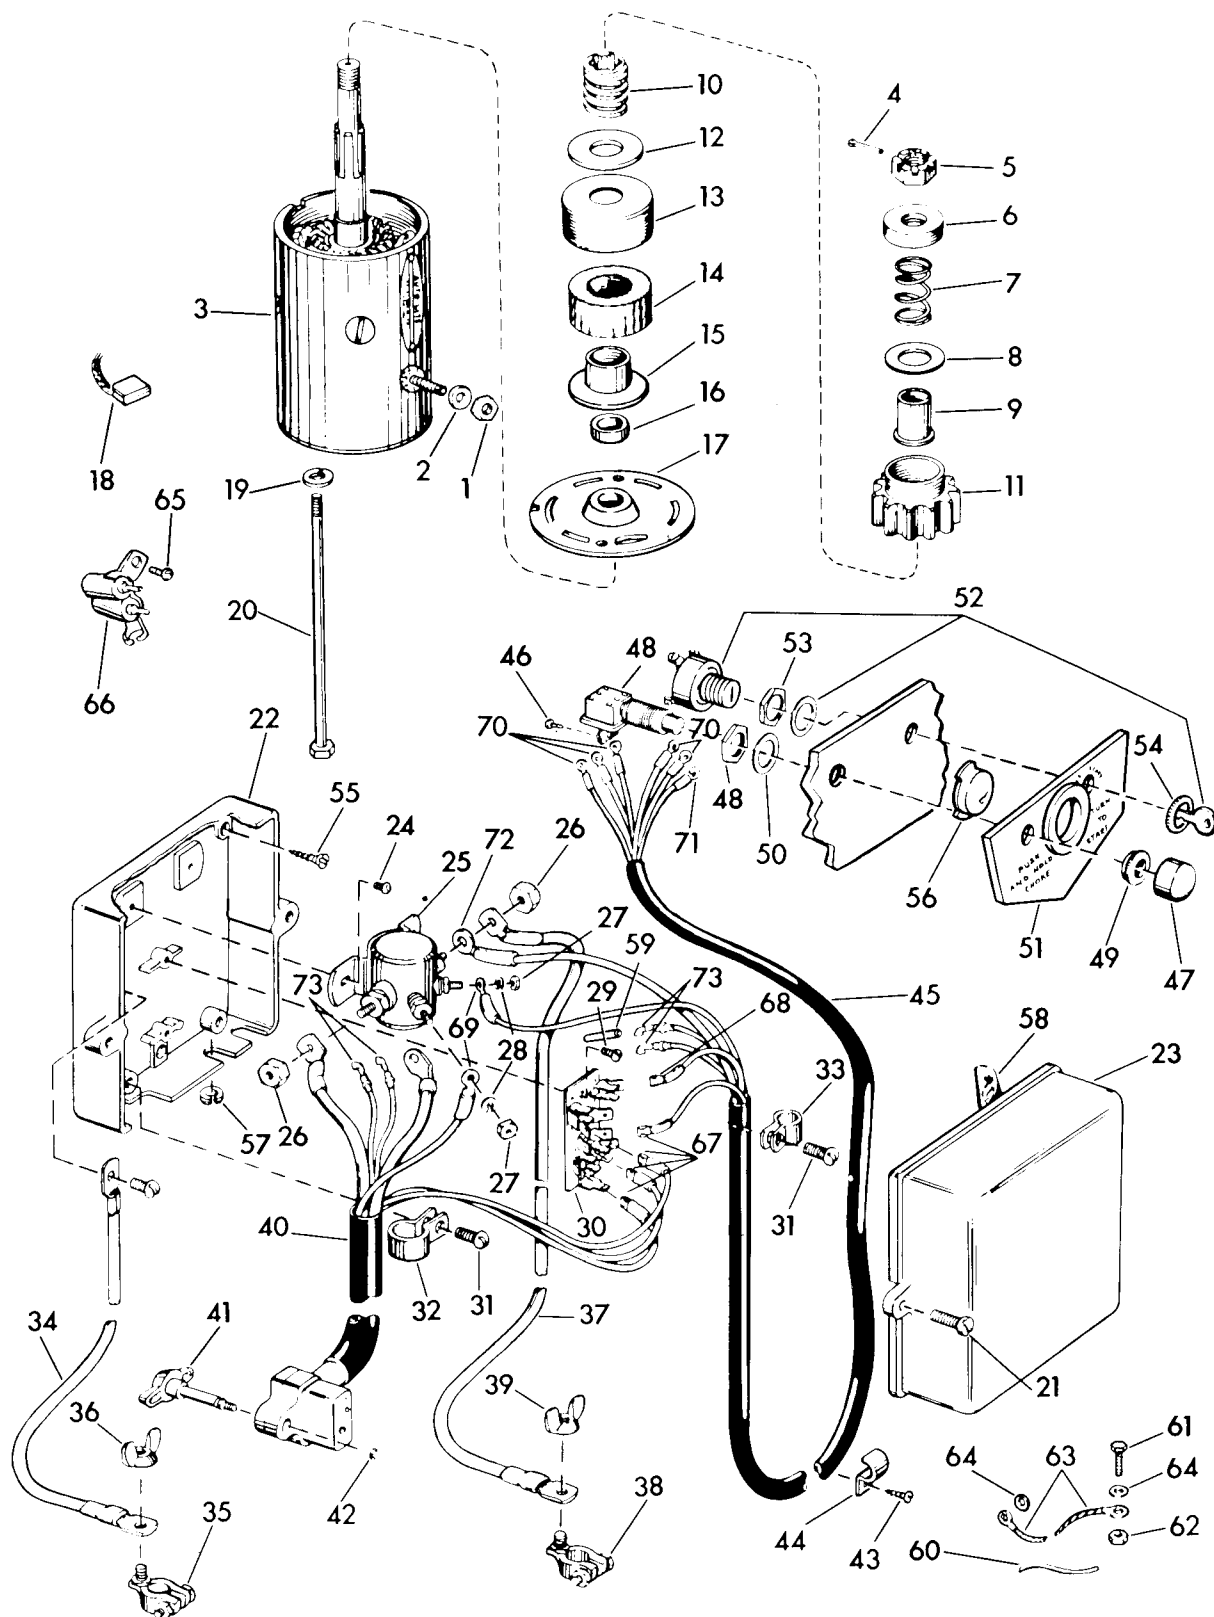


Ref. No.	Part No.	Description
1	303932	Nut - Starter Motor Terminal
2	306396	Lockwasher - Starter Motor Terminal
*3	376850	Starter Motor Assembly, Complete
	277706	. Bendix Drive Assembly . .
4	120219	. . Pin - Cotter Armature Shaft
5	203569	. . Nut - Drive
6	204375	. . Stop - Pinion
7	204078	. . Spring - Anti-drift
8	204071	. . Washer - Pinion
9	204075	. . Sleeve - Anti-drift
10	204074	. . Shaft - Screw
11	204080	. . Pinion - Starter Motor . .
12	204070	. . Washer - Thrust Cup
13	204072	. . Cup - Cushion
14	204073	. . Cushion - Starter Motor . .
15	204077	. . Spacer - Cushion
16	204076	. . Washer - Thrust, Starter Motor
17	277705	. Starter Motor End Plate Assembly
18	277707	. Brush Set Assembly
19	306396	. Lockwasher - Frame Screw
	278188	. Armature Assembly
20	203864	. Screw - Frame
	592530	Junction Box and Switch Plate Assembly
21	306461	. Screw - Cover to Base
22	305616	. Base - Junction Box
23	203984	. Cover - Junction Box Assembly
24	303274	. Screw - Solenoid to Base . .
25	277628	. Solenoid - Starting Switch . .
26	303783	. Nut - Battery Cable, Motor Cable to Solenoid
27	306556	. Nut - Cable to Solenoid
28	120052	. Lockwasher - Solenoid Nut
29	303394	. Screw - Terminal Block to Base
30	377313	. Terminal Block Assembly . . .
31	305010	. Screw - Cable Clamps and Battery Cable to Junction Box
32	204008	. Clamp - Motor Cable to Junction Box
33	305697	. Clamp - Switch Cable to Junction Box
34	277633	. Cable Assembly - Battery, Negative
35	277623	. Battery Terminal Assy., Negative

Ref. No.	Part No.	Description
36	203980	. Wing Nut - Negative Terminal.
37	277632	. Cable Assembly - Battery Positive
38	277622	. Battery Terminal Assy., Positive
39	203979	. Wing Nut - Positive Terminal.
40	377278	. Cable Assembly - Junction Box to Connector
41	377356	. Knob and Stud Assembly . . .
42	304816	. Retaining Ring - Stud
43	305009	. Screw - Switch Cable Clamp to Boat
44	204006	. Clamp - Switch Cable to Boat
45	377279	. Cable Assembly Switch Plate to Junction Box
46	306559	. Screw - Choke and Starter Switches
47	203660	. Cover - Choke Switch Button
48	277757	. Switch Assembly - Choke . . .
49	203658	. . Nut - Choke Switch to Plate
50	301663	. . Washer - Choke Switch . . .
51	305666	. Switch Plate
52	277882	. Switch and Key Assembly - Starter
53	304644	. . Nut - Switch & Key Assy. . .
54	204366	. . Face Nut - Starter Switch
55	303776	. Screw - Junction Box Base to Boat
56	553583	. Medallion - Switch Plate . . .
57	304922	. Grommet - Battery Cable, Positive
58	204218	. Transfer - Wiring Diagram
59	303806	. Tubing - Insulation
60	304076	. Spring - Ground Steering Bracket
61	304077	. Screw - Ground Lead to Steering Bracket
62	306342	. Nut - Ground Lead Screw . . .
63	376349	. Ground Lead Cable and Terminal Assembly
64	301827	. Washer - Ground Lead
65	303951	. Screw - Mercury Switch
66	592698	. Mercury Switch Assembly . . .
67	204034	. Slip on Terminal.
68	204035	. Slip on Terminal
69	204036	. Ring End Terminal
70	204037	. Ring End Terminal
71	204040	. Ring End Terminal
72	204053	. Ring End Terminal
73	203529	. Knife Disconnect Terminal . .

*Contact your Auto-Lite Dealer for service on the Thrust Washer - Upper and Lower; Frame and Field Assembly; and Commutator End Head Assembly.

FUEL TANK AND PUMP

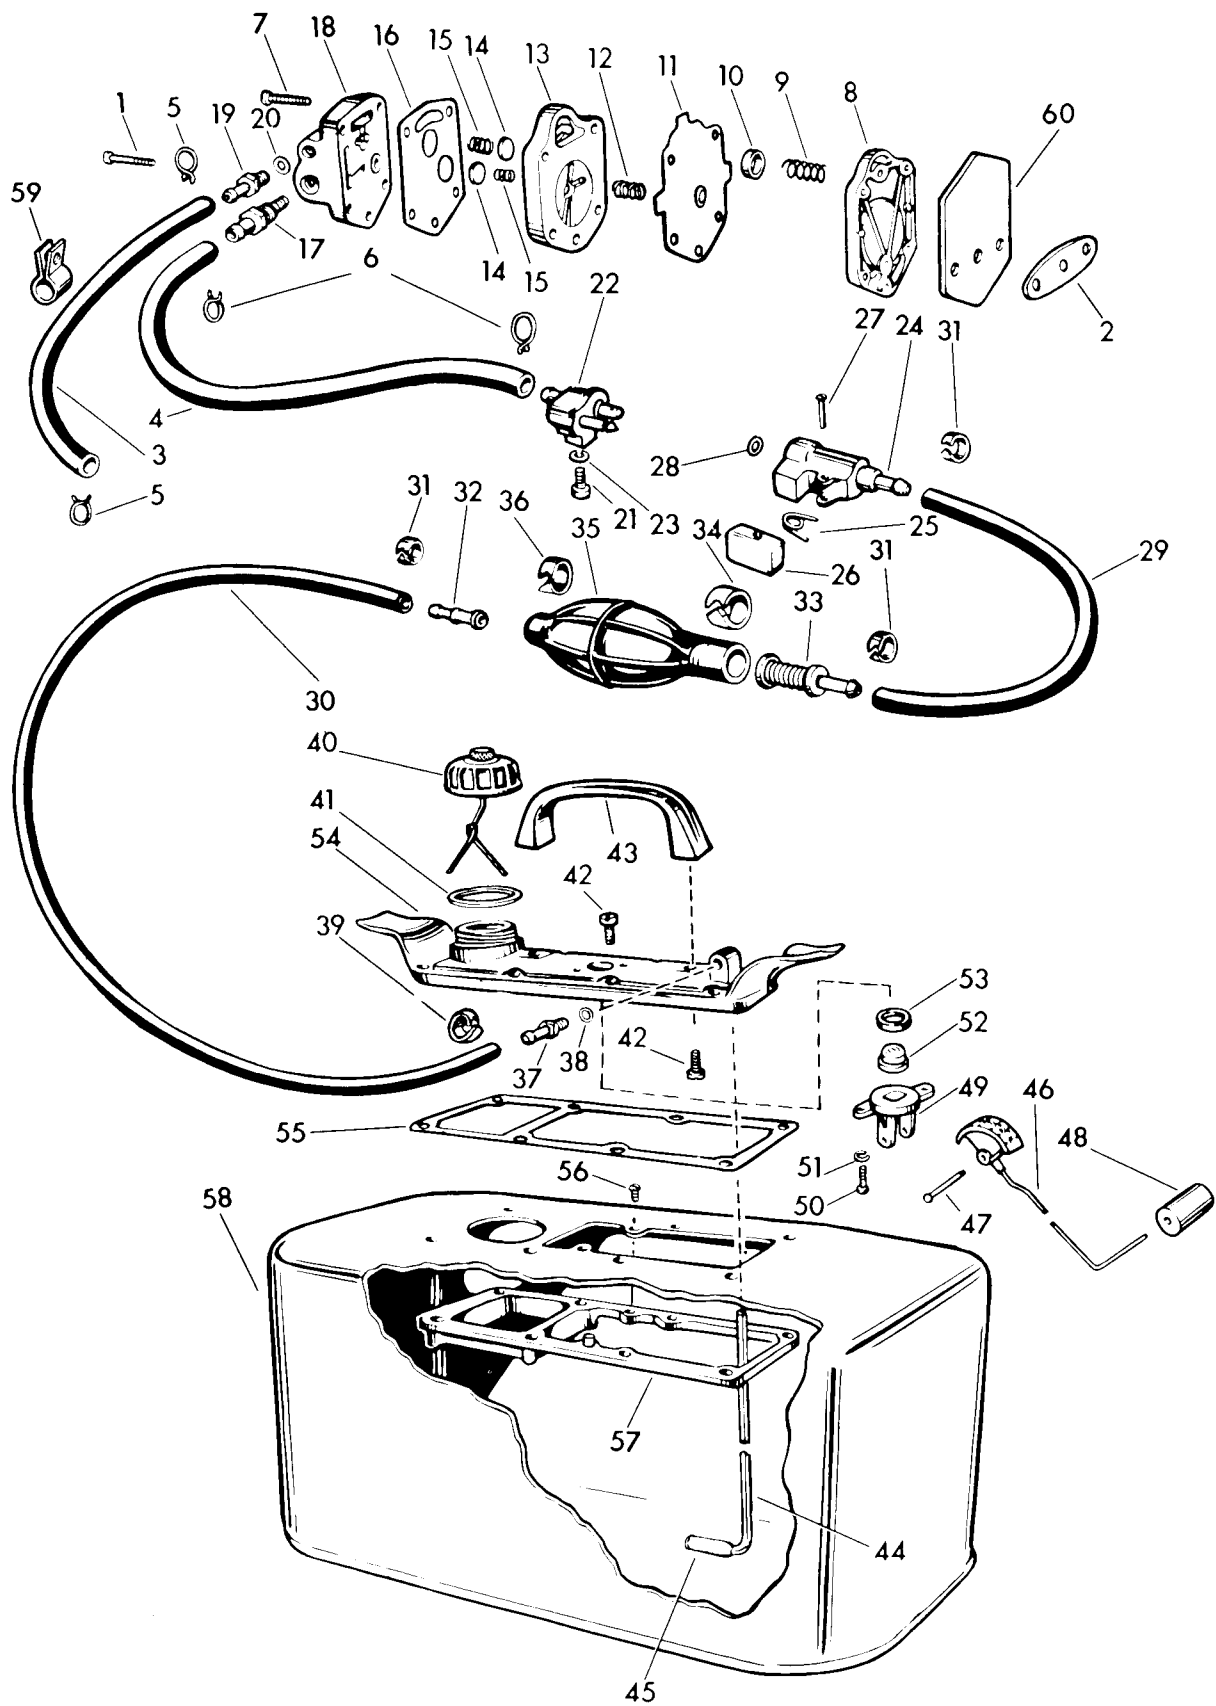


FUEL TANK AND PUMP

35DE12V

Ref. No.	Part No.	Description
1	552649	Screw - Fuel Pump to Bypass Cover
2	303615	Gasket - Fuel Pump to Bypass Cover
	591730	Fuel Pump and Hose Assy. .
3	304029	. Hose - Fuel Pump to Filter
4	303640	. Hose - Fuel Pump to Connector
5	302647	. Clamp - Hose
6	552199	. Clamp - Hose
	376620	. Fuel Pump Assembly
7	133451	. . Screw - Fuel Pump Assy.
8	304089	. . Housing - Outer
9	304486	. . Spring - Diaphragm Support
10	304094	. . Support - Diaphragm . . .
11	376619	. . Diaphragm Assembly . . .
12	303662	. . Spring - Diaphragm
13	304090	. . Housing - Inner
14	303643	. . Valve - Disc
15	303642	. . Spring - Inlet and Outlet .
16	304092	. . Gasket - Inner Housing to Valve Housing
17	376161	. . Nipple and Screen Assy. .
18	304091	. . Housing - Valve
19	303638	. Nipple - Fuel Pump Outlet .
20	303630	. Washer - Outlet Nipple . . .
21	303311	Screw - Fuel Connector to Steering Bracket
22	376154	Fuel Connector Body Assy. . .
23	306488	Lockwasher - Fuel Connector Screw
	591969	Gas Tank Assembly
	592823	. Fuel Hose - Primer Bulb and Connector Assembly .
24	376156	. . Fuel Connector Housing Assembly
25	301829	. . . Spring Fuel Connector Lock
26	301830	. . . Lock - Fuel Connector
27	301832	. . . Rivet Fuel Connector Lock
28	303598	. . . "O" Ring - Fuel Connector Seal
29	303601	. . Hose - Fuel Primer to Fuel Connector

Ref. No.	Part No.	Description
30	552501	. . Hose - Tank to Primer Bulb
31	303596	. . Clamp - Hose to Primer .
32	591841	. . Nipple and Valve Assembly
	592131	. . Primer - Bulb Nipple and Clamp Assembly
33	592242	. . . Nipple and Valve Assembly
34	553166	. . . Clamp - Bulb and Nipple
35	553164	. . . Primer Bulb
36	303596	. . . Clamp - Hose
37	552237	. Nipple - Housing to Hose . .
38	303630	. Washer - Outlet Nipple . . .
39	303596	. Clamp - Hose to Housing . .
40	591312	. Filler Cap Assembly
41	552328	. . Gasket - Filler Cap
42	304137	. Screw - Housing to Support Plate and Handle
43	101485	. Handle - Tank
44	591317	. Fuel Line and Screen Assembly
45	303429	. . Screen - Fuel Intake
46	591854	. Indicator Assembly
47	305821	. Pin - Indicator Assembly to Fuel Gage Housing
48	302559	. Float - Gas Tank
49	552763	. Housing - Fuel Gage
50	306431	. Screw - Fuel Gage Housing to Upper Housing
51	120052	. Lockwasher - Fuel Gage Screw
52	302568	. Glass - Gas Tank
53	302571	. Seal - Gas Tank
54	552762	. Housing - Upper Gas Tank .
55	302557	. Gasket - Tank
56	306492	. Screw - Support Plate to Tank
57	305356	. Plate - Tank Support
58	486252	. Fuel Tank (Only)
59	303663	Clamp - Hose
60	303680	Deflector - Fuel Pump to Gasket

TRIM - 35DE12V

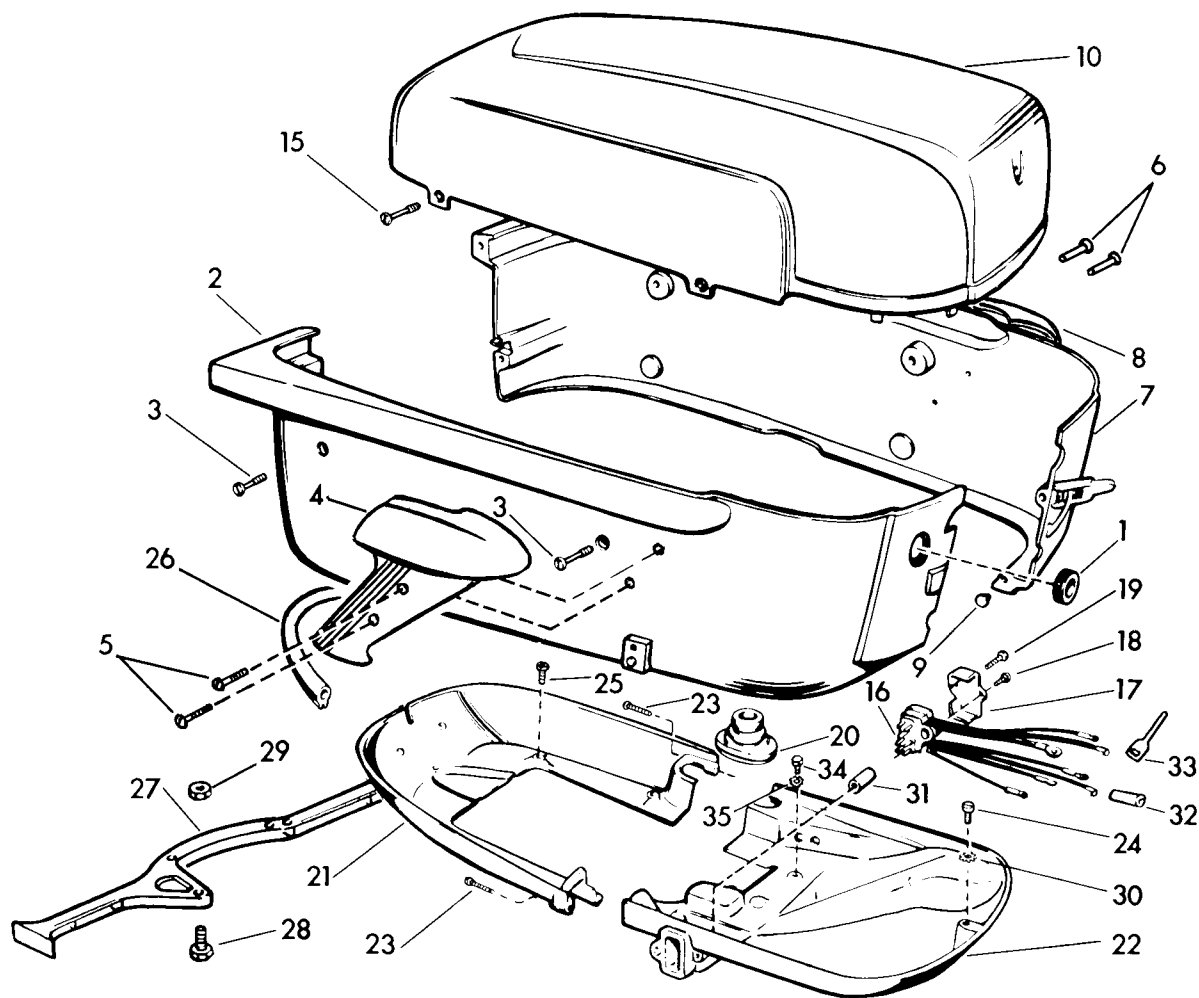

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	203308	Grommet - Choke Knob	*21	304460	Motor Cover Lower Rear . . .
* 2	553279	Shroud Assy., Stbd.	*22	377287	Motor Cover Lower Front . .
3	552198	Screw - Shroud Mounting . .	23	303714	Screw - Motor Cover, Front to Rear
4	552525	Applique - Starboard	24	300630	Screw - Lower Motor Cover to Air Silencer
5	552415	Screw - Applique to Shroud . .	25	306461	Screw - Lower Motor Cover to Exhaust Tube
6	552415	Screw - Applique to Shroud . .	26	304877	Seal - Lower Motor Cover to Shroud
* 7	592302	Shroud and Clamp Assembly Port	27	304914	Carrying Handle
8	552524	Applique - Port	28	304392	Screw
9	203290	Bumper - Shroud	29	306375	Nut
*10	591477	Shroud Assy., Top	30	306482	Washer
15	552224	Screw - Top Shroud to Brkt. . .	31	306218	Sleeve
16	377280	Cable Assembly - Connector to Starter Motor and Solenoid . .	32	303806	Tubing - Insulation
17	304766	Cover - Cable Assembly . . .	33	305021	Strap
18	306409	Screw - Cable Assembly Cover, Short	34	304027	Screw - Lower Motor Cover
19	306418	Screw - Cable Assembly Cover, Long	35	303480	Washer - Lock
20	304019	Grommet - Control Shaft to Lower Motor Cover		486559	Decal Set

*Important: Color of old parts must be specified when ordering new parts

Manufactured expressly for

EATON'S OF CANADA

by

OUTBOARD MARINE

Corporation of Canada Ltd.
PETERBOROUGH - CANADA